



View this machine and more at:

<https://www.thesewingstudio.co.uk>



BERNINA 700

# LOOKING FOR A NEW SEWING PROJECT?

You can find what you want in "inspiration", our sewing magazine. Thanks to great sewing patterns and detailed sewing instructions, every project succeeds right away.

Inspiration magazine  
is available in German, English,  
French and Dutch



\* Not available in all countries.



## Edition notice

### Graphics

[www.sculpt.ch](http://www.sculpt.ch)

### Text, Setting and Layout

BERNINA International AG

### Photos

Patrice Heilmann, Winterthur

### Order number

0371485.10A.04

2018-11 EN

### Copyright

2018 BERNINA International AG

**All rights reserved:** For technical reasons and for the purpose of product improvements, changes concerning the features of the machine can be made at any time and without advance notice. The supplied accessory can vary depending on the country of delivery.



# Table of Contents

<b>IMPORTANT SAFETY INSTRUCTIONS.....</b>	<b>10</b>
<b>Important information .....</b>	<b>12</b>
<b>1 My BERNINA.....</b>	<b>13</b>
1.1 Introduction .....	13
1.2 BERNINA Quality control .....	13
1.3 Welcome to the world of BERNINA .....	13
1.4 Explanation of symbols.....	14
1.5 Overview Machine .....	15
Overview front controls .....	15
Overview front .....	16
Overview sideways .....	17
Overview back.....	18
Overview Embroidery module .....	19
1.6 Supplied accessories.....	19
Overview accessories machine .....	19
Use of the power cable (only USA/Canada).....	21
Accessory box.....	21
Overview accessory Embroidery module.....	22
1.7 Overview User Interface .....	23
Overview Functions and Views.....	23
Overview System settings .....	23
Overview Selection menu .....	24
Overview Icons .....	24
1.8 Needle, Thread, Fabric.....	25
Overview Needles .....	25
Example for needle description .....	26
Needle/thread combination .....	26
Upper thread.....	27
Bobbin thread .....	27
1.9 Important Embroidery information .....	28
Choosing the embroidery motif .....	28
Selecting the embroidery file format .....	28
Embroidery test .....	28
The size of the embroidery motif .....	28
Embroidering motifs by third-party providers .....	28
Underlay stitches .....	28
Satin or Leaf stitch .....	29
Step stitch .....	29
Connecting stitches .....	29
<b>2 Embroidery preparation.....</b>	<b>30</b>
2.1 Accessory box .....	30
Accessory box free standing .....	30
Storing accessory.....	30



2.2	Connection and Switching on .....	31
	Connecting the foot control (Optional accessory).....	31
	Connecting the machine .....	31
	Fixing the touchscreen pen .....	32
	Switching the machine on .....	32
	Switching on the sewing light.....	32
2.3	Foot control (Optional accessory).....	32
	Regulating the speed via the foot control .....	32
	Raising/Lowering the needle .....	33
2.4	Spool pin .....	33
	Swiveling spool pin.....	33
	Horizontal spool pin .....	35
	Attaching the multiple-spool holder.....	35
2.5	Free arm .....	35
2.6	Embroidery foot.....	35
	Adjusting the presser foot position via the button «Presser foot up/down» .....	35
	Attaching the embroidery foot .....	35
	Selecting the embroidery foot in the User Interface.....	36
2.7	Needle and stitch plate.....	37
	Inserting the embroidery needle .....	37
	Selecting the needle in the User Interface .....	37
	Selecting needle type and needle size .....	38
	Attaching the stitch plate .....	38
	Selecting the stitch plate in the User Interface.....	39
2.8	Threading .....	39
	Threading the upper thread.....	39
	Winding the bobbin thread .....	42
	Threading the bobbin thread.....	44
	Thread-up command.....	46
	Indicating fill level of bobbin thread.....	46
2.9	Attaching the Module .....	46
2.10	Selecting the embroidery motif .....	47
2.11	Embroidery hoop .....	48
	Overview embroidery hoop selection .....	48
	Selecting the embroidery hoop .....	48
	Tear-away stabilizers.....	48
	Cut-away stabilizers.....	48
	Using adhesive spray .....	49
	Using spray starch .....	49
	Using iron-on interfacing.....	49
	Using paper-backed adhesive stabilizer .....	49
	Using water-soluble stabilizer .....	49
	Preparing the embroidery hoop .....	50
	Attaching the hoop .....	51
	Overview embroidery functions .....	51
	Centering the embroidery hoop to the needle .....	52
	Moving the hoop to the back .....	52
	Moving the embroidery arm to the left.....	52
	Grid on/off .....	52
	Locating the center of the embroidery motif.....	53
	Virtual positioning of the embroidery hoop.....	53



<b>3</b>	<b>Setup Program .....</b>	<b>54</b>
3.1	Embroidery settings.....	54
	Adjusting the upper thread tension .....	54
	Adjusting the maximum embroidering speed.....	54
	Centering or opening embroidery motifs in the original position.....	54
	Calibrating the embroidery hoop .....	55
	Entering the fabric thickness.....	55
	Activating/Deactivating the function thread away .....	56
	Programming the securing stitches .....	56
	Adjusting the thread cut.....	57
	Changing the measuring unit .....	57
3.2	Selecting personal settings .....	58
3.3	Monitoring functions .....	59
	Activating the upper thread indicator .....	59
	Activating the bobbin thread indicator.....	59
3.4	Activating the audio signals.....	59
3.5	Machine settings.....	60
	Selecting a language .....	60
	Adjusting the brightness of the display .....	60
	Adjusting the sewing light .....	60
	Calibrating the display .....	61
	Back to basic setting.....	61
	Deleting user data .....	61
	Deleting motifs on the BERNINA USB Stick.....	62
	Updating the machine Firmware.....	62
	Recovering saved data .....	63
	Cleaning the thread catcher .....	63
	Lubricating the machine .....	64
	Packing the embroidery module .....	64
	Checking the firmware version .....	65
	Reviewing the total number of stitches .....	65
	Registering details of the dealer .....	66
	Saving Service data.....	66
<b>4</b>	<b>System settings.....</b>	<b>67</b>
4.1	Calling up the tutorial .....	67
4.2	Calling up the Embroidery Consultant .....	67
4.3	Calling up the Help .....	67
4.4	Using eco mode .....	67
4.5	Cancelling any alterations with «clr» .....	67
<b>5</b>	<b>Creative embroidering .....</b>	<b>68</b>
5.1	Overview embroidering .....	68
5.2	Selecting and changing the embroidery motif .....	68
5.3	Checking the embroidery time and the embroidery motif size .....	68
5.4	Regulating the speed .....	68





5.5	Editing the embroidery motif.....	69
	Overview Editing embroidery motif.....	69
	Scaling up the embroidery motif view.....	69
	Downsizing the embroidery motif view.....	69
	Moving the embroidery motif view.....	70
	Moving the embroidery motif in enlarged view.....	70
	Moving the embroidery motif.....	70
	Rotating motif.....	71
	Altering the embroidery motif size proportionally.....	71
	Altering the embroidery motif size disproportionately.....	71
	Mirroring embroidery motifs.....	72
	Bending the text.....	72
	Changing the stitch type.....	73
	Altering the stitch density.....	73
	Checking the embroidery motif size and position.....	73
	Endless embroidery.....	75
	Duplicating the embroidery motif.....	77
	Deleting an embroidery motif.....	77
	Changing the sequence within an embroidery motif combination.....	77
	Undoing entries.....	78
	Grouping embroidery motifs.....	78
5.6	Pinpoint placement.....	79
	Positioning of grid points.....	79
	Free point positioning.....	80
5.7	Combining embroidery motifs.....	81
	Combining embroidery motifs.....	81
	Deleting a single embroidery motif.....	82
	Duplicating the embroidery motif.....	82
	Duplicating a combination.....	82
5.8	Creating lettering.....	83
	Overview embroidery alphabets.....	83
	Creating words/sentences.....	84
	Editing words/sentences.....	85
5.9	Changing the colors of the embroidery motif.....	86
	Overview changing the color.....	86
	Changing the colors.....	86
	Altering the colors via the color wheel.....	87
	Changing the thread brand.....	88
5.10	Embroidering the embroidery motif.....	88
	Overview Embroidery menu.....	88
	Adding basting stitches.....	88
	Moving the hoop.....	89
	Embroidery sequence control when thread breaks.....	89
	Cutting connecting stitches.....	89
	Reducing color changes.....	90
	Multi-colored embroidery motif on/off.....	90
	Endless Embroidery.....	90
	Color indication.....	91
5.11	Free arm embroidering.....	91



5.12	Administering embroidery motifs .....	92
	Administering embroidery motifs.....	92
	Saving embroidery motifs in the personal memory.....	93
	Saving the embroidery motif on the BERNINA USB stick.....	93
	Overwriting the embroidery motif in the personal memory.....	93
	Overwriting the embroidery motif on the BERNINA USB stick.....	93
	Loading an embroidery motif from the personal memory.....	94
	Loading an embroidery motif from the BERNINA USB stick.....	94
	Deleting an embroidery motif from the personal memory.....	94
	Deleting an embroidery motif from the BERNINA USB stick.....	94
<b>6</b>	<b>Embroidery.....</b>	<b>95</b>
6.1	Embroidering via the button «Start/Stop» .....	95
6.2	Increasing the embroidery speed.....	95
6.3	Adjusting the upper thread tension.....	96
6.4	Embroidering via the foot control (Optional accessory).....	96
<b>7</b>	<b>Attachment.....</b>	<b>97</b>
7.1	Maintenacnce and cleaning.....	97
	Cleaning the display.....	97
	Removing thread remnants under the stitch plate.....	97
	Cleaning the hook.....	97
	Lubricating the hook.....	98
7.2	Troubleshooting.....	100
7.3	Error messages.....	103
7.4	Storage and disposal.....	107
	Storing the machine.....	107
	Dispose of the machine.....	107
7.5	Technical data.....	107
<b>8</b>	<b>Overview stitch patterns.....</b>	<b>108</b>
8.1	Overview Embroidery motifs.....	108
	Editing embroidery motifs.....	108
	Projects.....	108
	Quilt motifs.....	109
	Borders and Lace.....	115
	Children.....	120
	Flowers.....	125
	Seasons.....	130
	Embellishment.....	134
	Sport.....	139
	Asia.....	142
	Charming Monograms.....	145
	Animals.....	152
	DesignWorks design.....	154
	Monograms in pink.....	156
	Monograms in blue.....	161
	<b>Index.....</b>	<b>166</b>



## IMPORTANT SAFETY INSTRUCTIONS

Please be aware of the following basic safety instructions when using your machine. Before using this machine, read instruction manual carefully.

### DANGER!

To reduce the risk of electrical shock:

- Never leave the machine unattended as long as it is plugged in.
- Always unplug the machine from the electrical outlet immediately after using.

Protection against LED radiation:

- Do not view the LED light directly with optical instruments (e.g. magnifier). The LED light corresponds with protection class 1M.
- When the LED light is damaged or defective, contact your BERNINA specialist dealer.

### WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- To operate the machine always use the supplied power cable. USA and Canada only: Do not connect power plug NEMA 1-15 to circuits exceeding 150 volt-to-ground.
- Use this machine only for purposes as described in this manual.
- Only use the machine in dry rooms.
- Do not use the machine in a damp condition or in a damp environment.
- Do not use this machine as a toy. Close attention is necessary when this machine is used by or near children.
- The machine can be used by children older than 8 or by people with reduced physical, sensory or mental capabilities or if there is a lack of experience and knowledge how to operate the machine as long as they are supervised or have been given instruction concerning the responsible use of the appliance and are aware of the involved risks.
- Children are not allowed to play with this machine.
- Cleaning and maintenance work must not be carried out by children unless they are supervised.
- Never operate this machine if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact the nearest authorized BERNINA dealer to arrange further details.



- Only use accessory recommended by the manufacturer.
- Don't use this machine when the ventilation openings are blocked. Keep the ventilation openings and the foot control free from the accumulation of lint, dust and loose cloth.
- Never insert any objects into any openings of the machine.
- Do not place any objects on the foot control.
- Always use the machine with a foot control of this type LV-1.
- Do not operate the machine where aerosol products (sprays) or oxygen are being used.
- Keep fingers away from all moving parts. Special care is required around the needle.
- Neither pull nor push the fabric while sewing. This can cause needle breakage.
- When making any adjustments in the needle area – such as such as threading the needle, changing the needle, threading the hook or changing the presser foot – turn power switch to «0».
- Do not use bent needles.
- Always use the original BERNINA stitch plate. The wrong stitch plate can cause needle breakage.
- To disconnect, turn power switch to «0» and then remove the plug from the outlet. Do not unplug by pulling the cord, instead grasp the plug to pull it from the outlet.
- Always disconnect the power plug from the electrical outlet when the covers are removed or opened, when the machine is lubricated or during any other maintenance adjustments mentioned in the instruction manual.
- This machine is provided with double insulation (except USA, Canada and Japan). Use only identical replacement parts. See instructions for Servicing of double-insulated products.
- The sound pressure level is lower than 70 dB(A) under normal conditions.

## Important information

### Availability of the instruction manual

The instruction manual is supplied with the machine.


- Keep the instruction manual safe at a suitable place near the machine to have it at hand in case that you need to look up something.
- If you pass the machine to a third party, always include the instruction manual.

### Appropriate use

Your BERNINA machine is conceived and designed for private household use. It answers the purpose to embroider fabrics and other materials as it is described in this instruction manual. Any other use is not considered proper. BERNINA assumes no liability concerning consequences resulting from an inappropriate usage.

### Servicing of double-insulated products

In a double-insulated product two systems of insulation are provided instead of grounding. No grounding means is provided on a doubleinsulated product, nor should a means for grounding be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system and should be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the original parts in the product. A double-insulated product is marked with the words: «Double insulation» or «double-insulated».

 The symbol may also be marked on the product.

### Environmental Protection

BERNINA is committed to the protection of the environment. We strive to minimize the environmental impact of our products by continuously improving product design and our technology of manufacturing.



The machine is labeled with the symbol of the crossed-out wastebin. This means that the machine must not be disposed of with the household waste when the machine is no longer needed. Improper disposal can result in dangerous substances getting into the groundwater and thus into our food chain, damaging our health.

The machine must be returned free of charge to a nearby collection point for waste electrical and electronic equipment or to a collection point for the reuse of the machine. Information on the collection points can be obtained from your local administration. When purchasing a new machine, the dealer is obliged to take back the old machine free of charge and dispose of it properly.

If the machine contains personal data, you are responsible for deleting the data yourself before returning the machine.



# 1 My BERNINA

## 1.1 Introduction

Your BERNINA 700 enables you to be endlessly creative due to the various applications. Delicate silk or satin fabrics as well as heavy-weight linen, fleece and denim can be embroidered successfully with this machine. Numerous embroidery motifs are at your disposal.

Additional to this instruction manual, following help programs are provided which will give you useful advice and support at any time how to operate you BERNINA 700.

The **Tutorial** gives information and explanations concerning various aspects of embroidering.

The **Embroidery Consultant** informs you about decision support for embroidery projects. After entering the desired embroidery project and the fabric, suggestions for the suitable needle and the suitable embroidery foot are displayed.

The **Help Program** contains information about individual embroidery motifs, functions and applications in the User Interface.

### Further information

In addition to this instruction manual of your BERNINA 700 further information products are enclosed.

The latest version of your instruction manual as well as additional information in connection with the machine and accessories can be found on our website <http://www.bernina.com>

## 1.2 BERNINA Quality control

All BERNINA machines are assembled with utmost care and are subjected to an extensive functionality test. The integrated stitch counter therefore indicates that the machine has already sewn stitches, which were performed exclusively for test purposes and quality control. The subsequent thorough cleaning does not exclude the possibility that thread remnants may still be found in the machine.

## 1.3 Welcome to the world of BERNINA

«Made to create», is BERNINA's slogan. Not only our machines do support you to implement your ideas. On top of that, our below mentioned opportunities also offer various inspirations and instructions for your future projects as well as the option to exchange ideas with other sewing and embroidering enthusiasts. We wish you lots of pleasure doing that.

### BERNINA YouTube Channel

On YouTube we offer a wide range of how-to videos and support concerning the most important functions of our machines. Detailed explanations are also provided as for the various presser feet, so that your projects will succeed completely.

<http://www.youtube.com/BerninaInternational>

Provided in the languages English and German.

### inspiration – the sewing magazine

Are you looking for ideas, sewing patterns and instructions for great projects? In that case the BERNINA magazine «inspiration» is exactly what you need. «inspiration» offers extraordinary sewing and embroidery ideas four times a year. From seasonal fashion trends to trendy accessories and practical tips to decorate your home in an original way.

<http://www.bernina.com/inspiration>

The magazine is available in the languages English, German, Dutch and French. Not available in all countries.

### **BERNINA Blog**

Fancy instructions, free sewing patterns and embroidery motifs as well as many new ideas: all this you can find in the weekly blog by BERNINA. Our experts give valuable tips and explain step by step how you can achieve the desired result. In the community you can upload your own projects and exchange experiences and ideas with other sewing and embroidering enthusiasts.

<http://www.bernina.com/blog>

Provided in the languages English, German and Dutch.

### **BERNINA Social Media**

Follow us on the social networking to learn more about events, thrilling projects as well as tips and tricks all about sewing and embroidering. We will keep you informed and we are looking forward to presenting you the one or the other highlight from the world of BERNINA.

<http://www.bernina.com/social-media>

## **1.4 Explanation of symbols**



Labels a danger with a high risk which can lead to death or severe injury unless it is avoided.



Labels a danger with a medium risk which can lead to death or severe injury unless it is avoided.



Designates a hazard with low risk that can cause minor or moderate injury if not avoided.



Designates a hazard that can cause property damage if not avoided.



**Tips** by BERNINA **Embroidery experts** can be found next to this sign.

By means of illustration, sample pictures are used in this instruction manual. The machines and accessories shown in the pictures do not necessarily correspond to the actual items delivered with your machine.

## 1.5 Overview Machine

### Overview front controls



- |   |  |    |                          |
|---|--|----|--------------------------|
| 1 | Sewing light on/off                      | 7  | Checking the motif size  |
| 2 | Thread cutter                            | 8  | Bobbin thread up         |
| 3 | Presser foot up/down                     | 9  | Upper Multifunction knob |
| 4 | Start/Stop                               | 10 | Lower Multifunction knob |
| 5 | Center the needle to the embroidery hoop | 11 | Pinpoint placement       |
| 6 | Moving the hoop to the back              | 12 | Motif center             |



### Overview front



- |   |                                      |    |                                   |
|---|--------------------------------------|----|-----------------------------------|
| 1 | Connection for the embroidery module | 6  | Slide speed control               |
| 2 | Bobbin cover                         | 7  | Thread take-up lever cover        |
| 3 | Embroidery foot                      | 8  | Thread take-up lever              |
| 4 | Needle threader                      | 9  | Fixing screw                      |
| 5 | Sewing light                         | 10 | Connection for the slide-on table |

## Overview sideways



- |   |                                 |    |                                       |
|---|---------------------------------|----|---------------------------------------|
| 1 | Connection for the foot control | 7  | Power switch                          |
| 2 | PC-connection                   | 8  | Connection for the power cable        |
| 3 | Spool pin                       | 9  | Magnet holder for the touchscreen pen |
| 4 | Winding unit with thread cutter | 10 | Air vents                             |
| 5 | Swiveling spool pin             | 11 | USB port                              |
| 6 | Handwheel                       |    |                                       |





## Overview Embroidery module



- |   |   |   |                             |
|---|---|---|-----------------------------|
| 1 | Embroidery arm                            | 3 | Guide rails for the machine |
| 2 | Bracket for attaching the embroidery hoop | 4 | Connection to the machine   |

## 1.6 Supplied accessories

### Overview accessories machine

**All rights reserved:** For technical reasons and for the purpose of product improvements, changes concerning the features of the machine can be made at any time and without advance notice. The supplied accessory can vary depending on the country of delivery.

Please visit [www.bernina.com](http://www.bernina.com) for more accessory information.















Illustration	Name	Purpose
	Soft Cover with pocket	To protect the machine from dust and contamination.
	Accessory box	To store the supplied accessories as well as the optional accessories.

Illustration	Name	Purpose
	Multiple-spool holder	For quick access to the thread spools and thread changes, e.g. for multicolored embroidery motifs.  For a longer way to the needle and therefore to the option to untangle difficult threads before embroidering.
	Spool disc	To support the regular unwinding of the thread from the spool.  3 different sizes for thread spools in different sizes.
	Bobbin 4 pieces, 1 of them in the machine	To wind the bobbin thread.
	Foam pad 2 pieces	To prevent the thread from slipping under the spool holder, tangling and breaking.
	Touchscreen pen	For precise operation of the touch display.
	Seam ripper	To undo seams and to cut buttonholes open.
	Screwdriver Torx, gray	To change the needle.
	Screwdriver red (slot)	To loosen and tighten slotted screws.
	Angular Torx wrench Torx	To open the headframe.
	Brush	to clean the feed dog and the hook race area.
	Oil pen	To fill up the oil depots.
	Power cable	To connect the machine with the power supply system.


### Use of the power cable (only USA/Canada)

The machine has a polarized plug (one blade wider than the other). To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way!

### Accessory box

**All rights reserved:** The machine's features and parts are subject to unannounced changes at any time for technical reasons and for the purpose of product improvement. The supplied accessory can vary depending on the country of delivery.

The illustrated accessory (kind and quantity) serves as an example and doesn't have to correspond with the supplied accessory.

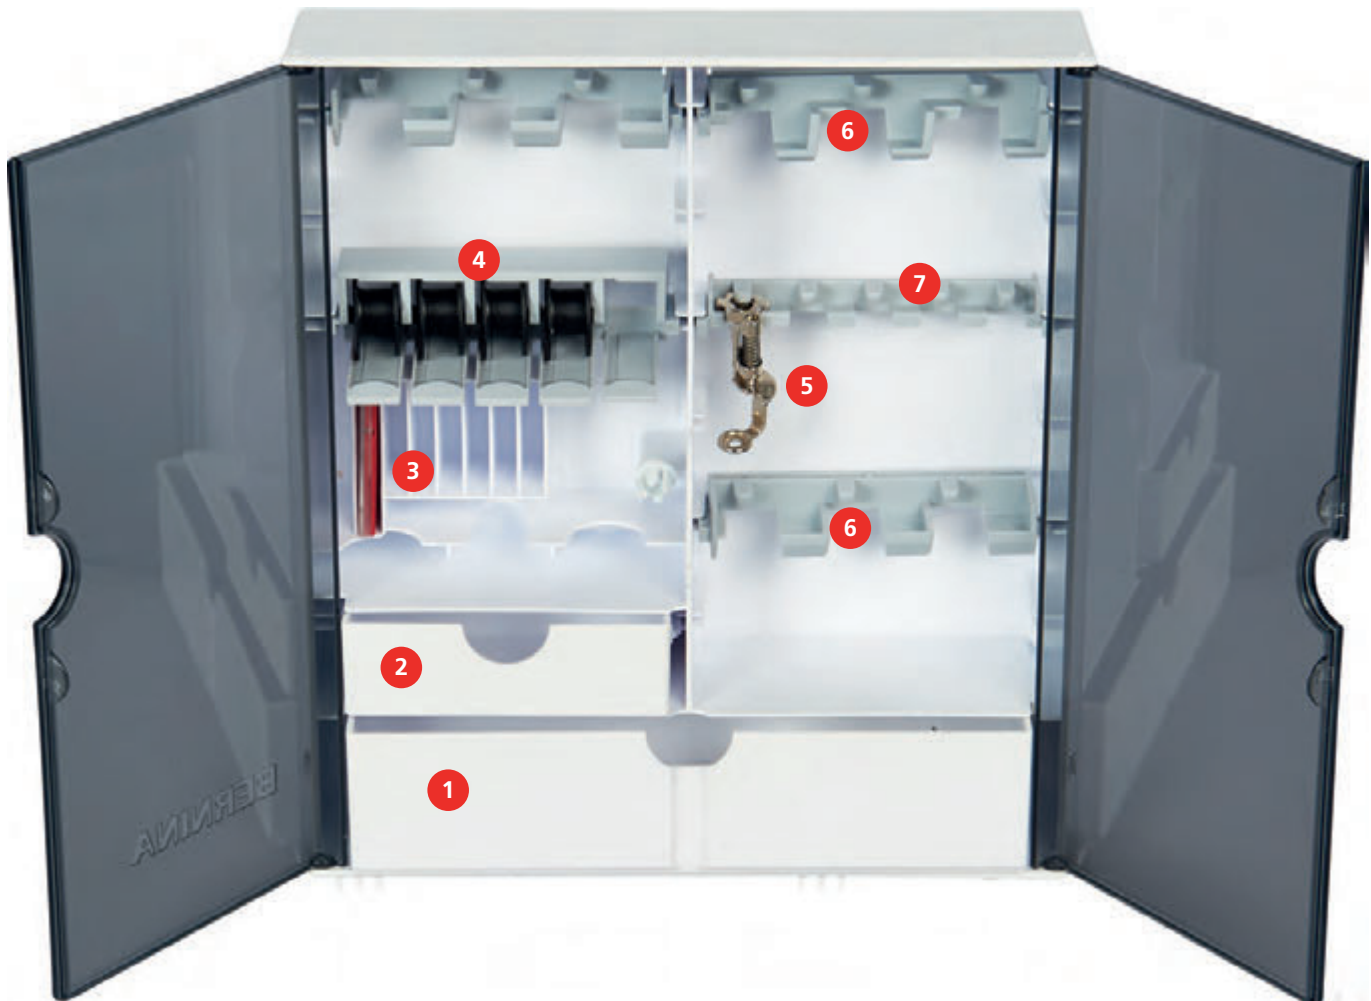

- |   |                      |   |                                    |
|---|----------------------|---|------------------------------------|
| 1 | Big drawer           | 5 | Embroidery foot                    |
| 2 | Small drawer         | 6 | Holder for embroidery feet, 9.0 mm |
| 3 | Selection of needles | 7 | Holder for embroidery feet, 5.5 mm |
| 4 | Spool pin            |   |                                    |

## Overview accessory Embroidery module

**All rights reserved:** For technical reasons and for the purpose of product improvements, changes concerning the features of the machine can be made at any time and without advance notice. The supplied accessory can vary depending on the country of delivery.

Please visit [www.bernina.com](http://www.bernina.com) for more accessory information.







Illustration	Name	Purpose
	Embroidery foot # 26	For embroidering, darning and free-motion quilting.
	Large oval embroidery hoop	To embroider large embroidery motifs or motif combinations up to 145 x 255 mm (5.70 x 10.04 in).  Including the template for precise fabric positioning.
	Medium embroidery hoop	To embroider medium-sized embroidery motifs up to 100 x 130 mm (3.94 x 5.12 in).  Including the template for precise fabric positioning.
	Small embroidery hoop	To embroider small embroidery motifs up to 72 x 50 mm (2.83 x 1.97 in).  For free arm embroidering with closed sewing projects such as sleeves, trouser legs or socks.  Including the template for precise fabric positioning.
	USB Connecting cable	To transfer data from the computer to the machine or vice versa.
	Embroidery needle assortment	For embroidering.
	Template holder	To place and remove the template in or out of the embroidery hoop.

Illustration	Name	Purpose
	Net for upper thread spool	To support an even unwinding of the thread with slippery embroidery threads.

## 1.7 Overview User Interface

### Overview Functions and Views



- |   |   |   |   |
|---|---|---|---|
| 1 | Upper thread tension                        | 4 | Embroidery hoop display/Embroidery hoop selection |
| 2 | Needle selection                            | 5 | Stitch plate selection                            |
| 3 | Presser foot display/Presser foot selection | 6 | Fill level of bobbin thread                       |

### Overview System settings



- |   |                       |   |                       |
|---|-----------------------|---|-----------------------|
| 1 | Home                  | 5 | Help                  |
| 2 | Setup Program         | 6 | eco mode              |
| 3 | Tutorial              | 7 | Back to basic setting |
| 4 | Embroidery consultant |   |                       |




## Overview Selection menu



- |   |                             |   |                   |
|---|-----------------------------|---|-------------------|
| 1 | Selection embroidery motifs | 3 | Color information |
| 2 | Editing embroidery motifs   | 4 | Embroidery        |

## Overview Icons

Icon	Name	Purpose
	i-Dialog	Touching the icon «i»-Dialog provides various functions to edit motifs.
	Close	The display is closed and the previously made adjustments are saved.
	Icons «-/+»	By touching the icons «-» and «+» the setting values are changed.
	Yellow frame around the icon	A yellow-framed icon indicates that a setting or a value in this function has been changed. By touching the yellow-framed icon, the default setting can be restored.
	Confirm	Confirms the previously adjusted alterations. The display is closed.
	Cancel	The process is canceled. The display is closed and the previously made adjustments are not saved.
	Slide	By moving the slide the setting values are changed.
	Switch	Activates or deactivates functions.






Icon	Name	Purpose
	Process navigation	With the process navigation scrolling back in the display is possible.
	Swipe function	By swiping the display using the touchscreen pen or the finger upwards or downwards, further functions can be displayed.

## 1.8 Needle, Thread, Fabric

In the course of time a needle wears out. Therefore it should be replaced regularly. Only a perfect point results in a good stitching result. In general it can be said: the thinner the thread, the finer the needle. The illustrated needles are either standard or optional accessory, depending on the machine.

- Needle sizes 70, 75: for thin fabrics.
- Needle sizes 80, 90: for medium fabrics.
- Needle sizes 100, 110 and 120: for heavy fabrics.

### Overview Needles

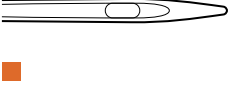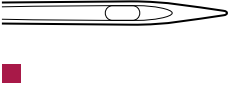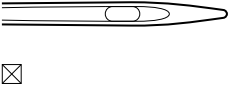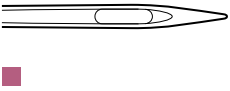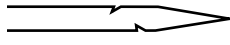Illustration	Needle name	Needle description	Purpose
	<b>Jersey/Embroidery needle</b> 130/705 H SUK 60-100	Mid-sized ball point	For knitware, knitted good. For embroidering.
	<b>Embroidery needle</b> 130/705 H-E 75, 90	Small ball point, especially wide needle eye and wide thread groove	For embroidery on all natural and synthetic fabrics.
	<b>Fine-material needle</b> 130/705 H SES 70, 90	Small ball point	For fine knitware and knitted materials. For embroidery on fine, delicate fabrics.
	<b>Metafil needle</b> 130/705 H METAFIL 80	Long needle eye (2 mm) in all needle sizes	For sewing or embroidering with metallic threads.
	<b>Felt needle</b> PUNCH	Needle with barbed hook	For felt work.

### Example for needle description

The 130/705 system, which is the most common for household machines, is explained by the following picture of a Jersey/Stretch needle.

	<p><b>130/705 H-S/70</b></p> <p><b>130</b> = Shank length (1)</p> <p><b>705</b> = Flat shank (2)</p> <p><b>H</b> = Needle scarf (3)</p> <p><b>S</b> = Needle point (here medium ball point) (4)</p> <p><b>70</b> = Needle size 0.7 mm (5)</p>
--	---

### Needle/thread combination

	<p>The needle/thread combination is correct, when the thread fits perfectly into the long groove and goes easily through the needle eye. The thread can be optimally secured.</p>
	<p>The thread can break and skipped stitches can occur when there is too much clearance in the long groove and the needle eye.</p>
	<p>The thread can break and get stuck when the thread scrapes against the edge of the long groove not fit well into the needle eye optimally.</p>

## Upper thread

A good quality thread (brand manufacturer) is essential for embroidery so that the embroidery is not affected negatively because of poor thread or thread breakage.

Embroidery is particularly effective if you use 40wt glossy rayon or polyester embroidery threads as upper threads. They are available in a wide range of colors for beautiful embroidery.

- Glossy polyester with a brilliant sheen is a hard wearing, colorfast thread and has a high tensile strength which is suitable for all types of embroidery.
- Rayon is a soft viscose fiber with a brilliant sheen and suitable for fine, delicate embroidery, or items that will not receive excessive wear and tear.
- Metallic thread is a light to medium-weight thread suitable for special effects in embroidery.
- When working with metallic threads, the automatic bobbin thread cutter should be deactivated. The other thread cutters shouldn't be used either because the knives are likely to wear off very quickly.
- When using metallic threads, the speed and the upper thread tension should be reduced.



## Bobbin thread

In most cases black or white bobbin thread is used for embroidering. When both sides should have the same look, it is recommended to use the same color for bobbin and upper thread.

- Bobbin Fill is an especially soft and light polyester thread which is suited well to be used as bobbin thread. This special bobbin thread ensures a steady thread tension and an optimal intertwining of the upper and bobbin thread.
- Darning and embroidery threads are fine mercerized cotton threads which are suitable for embroidery on cotton.



## 1.9 Important Embroidery information

### Choosing the embroidery motif

Simple motifs with a low stitch count are suitable for embroidery on fine material. Densely embroidered motifs, e. g. embroidered motifs with multiple color and embroidery direction changes, are suitable for medium and heavy-weight material.

### Selecting the embroidery file format

In order that embroidery motifs can be read by the BERNINA embroidery machine, they have to be created by the BERNINA Embroidery software and exported as .EXP file. Besides the actual embroidery file, a .BMP file and an .INF file are generated additionally. The .BMP file allows a preview of the embroidery motif and the .INF file provides the information on the thread colors. **Please note:** If the .INF file is missing, the embroidery motif cannot be displayed in the real color but only in standard colors. In this case, the colors can be entered manually in the color overview of the motif on the machine.

Additionally, following embroidery formats can be read by the machine: .PES, .PEC, .XXX, .PCS, .JEF and .DST. BERNINA International AG doesn't warrant that embroidery motifs which have not been created or converted by the BERNINA Embroidery software can be correctly read and embroidered.

Simple motifs with a low stitch count are suitable for embroidery on fine material. Densely embroidered motifs, e. g. embroidered motifs with multiple color and embroidery direction changes, are suitable for medium and heavy-weight material.

### Embroidery test

For the embroidery test, always use the original material reinforced with the same stabilizer as will be used later. For the embroidery test it is recommended to use the same colors, threads and needles which are planned to be used for the embroidery project.

### The size of the embroidery motif


Embroidery motifs can be enlarged or downsized on the embroidery machine or on the PC using the BERNINA Embroidery software (optional accessory). Enlargements or reductions up to 20% achieve the best results.

### Embroidering motifs by third-party providers

BERNINA recommends uploading embroidery motifs of any file format via the free program «ART-Link» to the machine or a USB stick. Using «ART-Link» ensures that the embroidery motif can be read and embroidered correctly. «ART-Link» can be downloaded for free at [www.bernina.com](http://www.bernina.com).


### Underlay stitches

Underlay stitches are the foundation of a motif and are used to stabilize the base material and hold it in shape. They also prevent the covering stitches of the motif from sinking into the knit or the nap of the material.

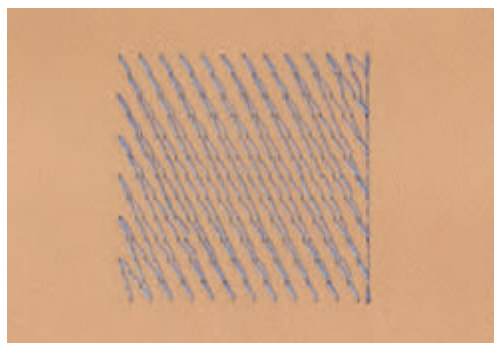


### Satin or Leaf stitch

The needle moves left to right and vice versa. The result is a very dense, covering zig zag stitching to fill the shape. Satin stitching fills are ideal for narrow and small shapes. Satin stitching is, however, not suitable for larger areas, since wide stitches are too loose and do not cover the fabric properly. In addition there is the risk that with too long stitches the threads could catch on something which would damage the embroidery.

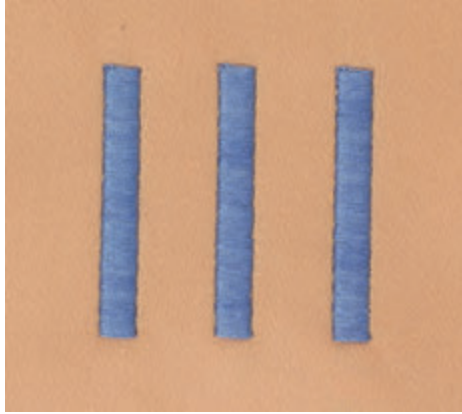


### Step stitch

Many short, equally long stitches are embroidered in offset rows closely next to each other which results in a densely filled area.

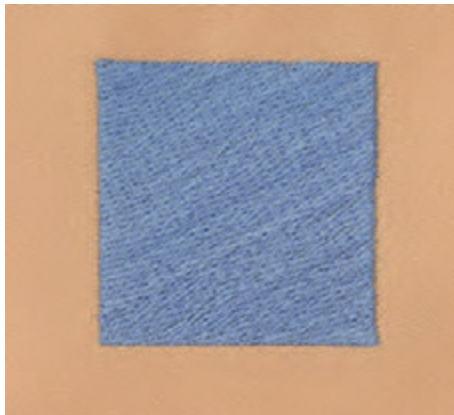

### Connecting stitches

Long stitches which are used to get from one part of the motif to the next. Before and after the connecting stitch securing stitches are sewn. Connecting stitches are trimmed.

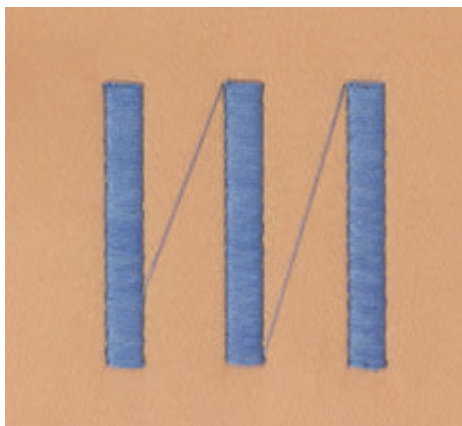

## 2 Embroidery preparation

### 2.1 Accessory box

#### Accessory box free standing

- > On the back of the box, pull both extensions out until they click into place.



#### Storing accessory

##### NOTICE

#### Incorrect sorting of the bobbin

The silvery sensor surface can get scratched.

- > Make sure that the silvery sensor surfaces are on the right side when sorting the bobbins into the accessory box.

- > Insert the holders (1) for bobbins, feet and needles.
- > Store the small parts, e.g. thread discs etc., in the drawers (2) and (3).
- > Store the provided needle package in the special compartment (4).
- > Insert the bobbins into the compartment (5) of the accessory box so that the silvery sensor surfaces are on the right side.
- > To remove a bobbin, press the compartment holder down.
- > Store the embroidery feet (5.5 mm or 9.0 mm) in the holders (6).



## 2.2 Connection and Switching on

### Connecting the foot control (Optional accessory)

- > Unwind the cable of the foot control to the desired length.



- > Insert the cable of the foot control into the foot control connection.



### Connecting the machine

- > Insert the power cable into the power cord connection.



- > Insert the power cable into the power cord connection.





### Fixing the touchscreen pen

- > Store the touchscreen pen at the magnet holder.



### Switching the machine on

- > Switch on the machine at the main switch to «I».



### Switching on the sewing light

Prerequisite:

- The sewing light has to be activated in the Setup Program.
- > Push the button «Sewing light» to switch the sewing light off.
- > Push the button «Sewing light» again to switch the sewing light on.
  - The sewing light can also be switched on and off in the Setup Program. (see page 60)



## 2.3 Foot control (Optional accessory)

### Regulating the speed via the foot control

Via the foot control the speed can be adjusted steplessly.

- > Press the foot control down carefully to start the machine.
- > To embroider faster, press the foot control harder.
- > Release the foot control to stop the machine.







Embroidery preparation

> Place the thread spool on the spool holder.





- > Guide the embroidery foot upwards over the cone (2).



- > Press the clamping lever down.



### Selecting the embroidery foot in the User Interface

After having attached the respective embroidery foot (Embroidery foot No. 26, supplied accessory with the embroidery module), you can select and save it on the machine. Moreover, alternative feet are displayed which will also be suitable for the selected embroidery motif.

- > Switch the machine on.
- > Select an embroidery motif.
- > Touch the icon «Presser foot display/Presser foot selection».



- > Touch the icon «Optional presser feet» to display all the suitable feet for the selected embroidery motif.
- > Select the attached embroidery foot.



## 2.7 Needle and stitch plate

### Inserting the embroidery needle



Embroidery needles of the type 130/705 H-SUK provide a larger eye and are slightly rounded. This avoids thread abrasion when using Rayon- and cotton embroidery thread. Depending on the embroidery thread use a size No. 70-SUK to No. 90-SUK needle.

- > Raise the needle.
- > Switch the machine off and disconnect it from the power supply system.
- > Remove the attached foot.
- > Loosen the fixing screw of the needle using the screwdriver gray Torx.



- > Pull the needle down.
- > Hold the new needle with the flat side to the back.
- > Insert the needle as far as it will go.
- > Tighten the fixing screw of the needle using the screwdriver gray Torx.

### Selecting the needle in the User Interface

After having changed the needle, it can be checked whether it can be used in combination with the selected stitch plate.



- > Touch the icon «Needle selection».
- > Select the inserted needle.



 
- If the selected needle is suitable in combination with the stitch plate, embroidering can be started.
- If the selected needle is not suitable in combination with the stitch plate, starting the machine is automatically blocked.

## Selecting needle type and needle size

Convenient memory function: To prevent a loss of information, the needle type and the needle size can be saved additionally on the machine. The saved needle type and the saved needle size can be checked at any time.



> Touch the icon «Needle selection».

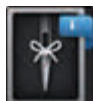

> Touch the icon «Needle type/Needle size».  
 > Select the needle type (1) of the inserted needle.  
 > Select the needle size (2) of the inserted needle.



## Attaching the stitch plate

The stitch plate has a small hole in the needle insertion area. The thread is pulled in and knotted optimally which results in an optimized stitching result.

Prerequisite:

- The machine is switched off and disconnected from the power supply system.
- The foot and the needle are removed.

> Press the stitch plate down at the mark back right until it flips up.



> Remove the stitch plate.  
 > Place the openings of the stitch plate (PunchWork, Optional accessory) above the corresponding guide pins and press down until it clicks into place.



## Selecting the stitch plate in the User Interface

After having replaced the stitch plate, it can be checked whether it can be used together with the selected needle.



- > Touch the icon «Stitch plate selection».
- > Select the attached stitch plate (PunchWork, optional accessory).



- If the selected needle is suitable in combination with the stitch plate, embroidering can be started
- If the selected needle is not suitable in combination with the stitch plate, starting the machine is automatically prevented

## 2.8 Threading

### Threading the upper thread

Prerequisite:

- The needle and the presser foot are raised.
- The machine is switched off and disconnected from the power supply system.
- > Place the foam pad on the spool holder.
- > Place the thread spool on the spool holder so that the thread unwinds clockwise.
- > Add the appropriate spool disc.
- > Guide the thread in direction of the arrow through the rear thread guide (1) and hold the thread with the hands so that it is taut and can be inserted into the thread tension.
- > Guide the thread in direction of the arrow through the thread tension (2).



- > Guide the thread downwards (3) around the thread take-up lever cover (4).
- > Guide the thread upwards and insert into the thread take-up lever (5).



> Guide the thread downwards again (6).



> Guide the thread through the guides (7/8) above the presser foot.




> Switch the machine on.





- > Pull the thread loop (14) to the back.

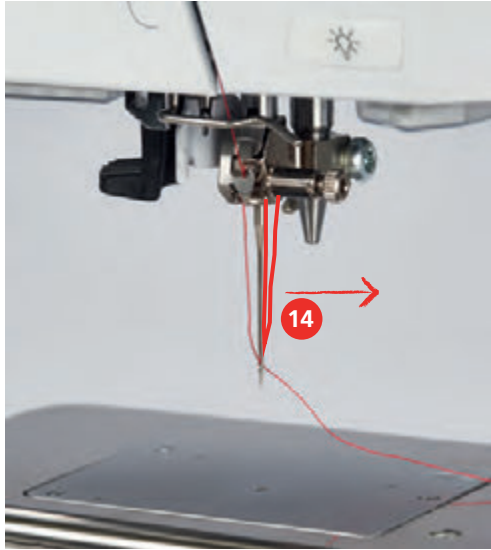

- > Pull the thread beneath the presser foot from back to front over the thread cutter (15) and cut.



## Winding the bobbin thread



The bobbin thread can be wound while embroidering if the swiveling spool holder is used for winding.

Prerequisite:


- The foam pad, the thread spool and the appropriate thread disc are positioned.
- > Attach the empty bobbin on the winding unit (1) so that the silvery sensor surface is down.



- > Guide the thread to the left into the rear thread guide (2).
- > Guide the thread around the thread pretension clockwise (3).



- > Wind the thread clockwise 2 to 3 times around the empty bobbin (4).

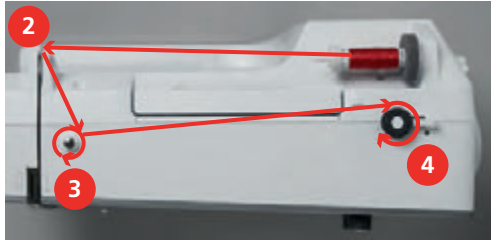

- > Pull the excess thread over the thread cutter at the engaging lever (5) and cut.



- > Push the engaging lever (6) towards the bobbin.



- The machine winds and the display to wind the bobbin appears.
- > Move the slide on the display using the touchscreen pen/finger to adjust the winding speed.
- > To stop the winding process, the engaging lever must be pressed to the right.
- > Push the engaging lever towards the bobbin again to continue the winding process.
  - As soon as the bobbin is full, the machine stops the winding process automatically.
- > Remove the bobbin and cut the thread using the thread cutter at the engaging lever.



- > Pull the thread into the slot (2) from the left.



- > Pull the thread to the right under the spring (3), then lead the thread under the two thread guides (4) and pull upwards.




- > When inserting into the machine, hold the bobbin case so the thread guide (5) points upwards.



- > Insert the bobbin case.
- > Press onto the center of the bobbin case until it engages.



- > Pull the thread through the thread cutter (6) and cut.

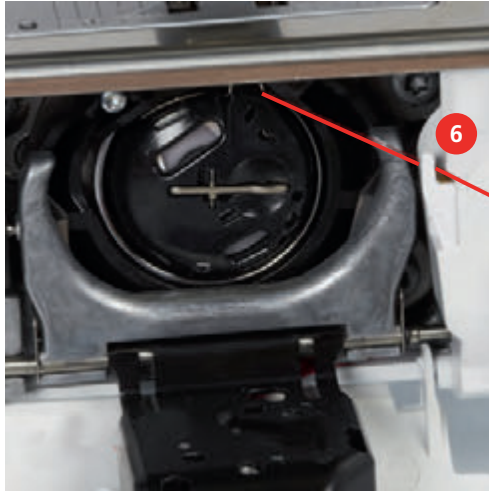

- > Close the bobbin cover.

### Thread-up command

The machine must be ready for embroidery to bring up the bobbin thread. The bobbin thread can be brought up in one step for a manual knotting. If no securing stitches are wanted, it is recommended to deactivate the securing stitches in the Setup.



- > Hold the upper thread.
- > Press the button «Needle up/down».
  - The bobbin thread is brought up automatically.

### Indicating fill level of bobbin thread

As soon as the fill level of the bobbin thread is low, an animation, which indicates that the bobbin thread is running out, appears in the icon «Bobbin thread fill level».



- > Touch the icon «Bobbin thread fill level» to thread the bobbin thread according to the animation.

## 2.9 Attaching the Module

### NOTICE

#### Transporting the embroidery module


Damage to the embroidery module connection and machine.

- > Remove the embroidery module before transporting the machine.


Prerequisite:

- The slide-on table (optional accessory) must not be attached.
- > Make sure that the module and the machine are placed on a stable, even surface.
- > Make sure that there is enough space around to allow the unimpeded movement of the embroidery arm.
- > Lift the embroidery module on the left.

- > Carefully push the module from left to right into the embroidery module connection (1) of the machine.

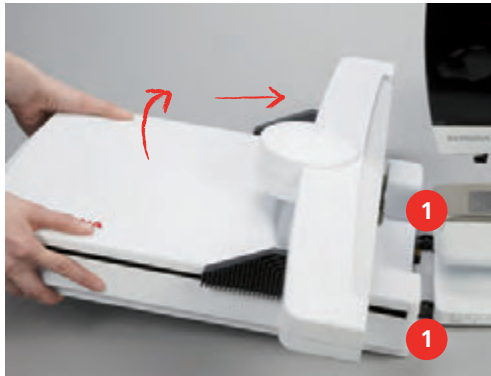

- > To remove, lift the embroidery module on the left and carefully pull to the left.

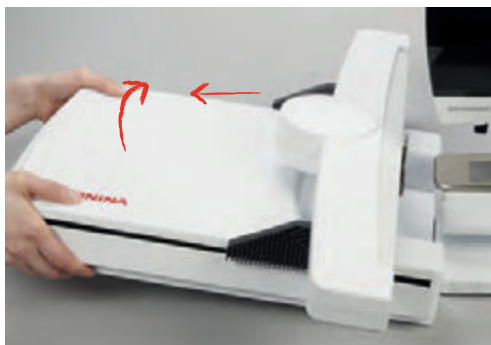


## 2.10 Selecting the embroidery motif

All embroidery motifs can either be embroidered as-is or changed using the various functions offered by the machine. All embroidery motifs can be found in the attachment. In addition to that, embroidery motifs from the personal memory or from the BERNINA USB stick (optional accessory) can be loaded.

Prerequisite:


- The Embroidery foot No. 26 is attached.
- > Select an alphabet, embroidery motif or a personal embroidery motif from a file.

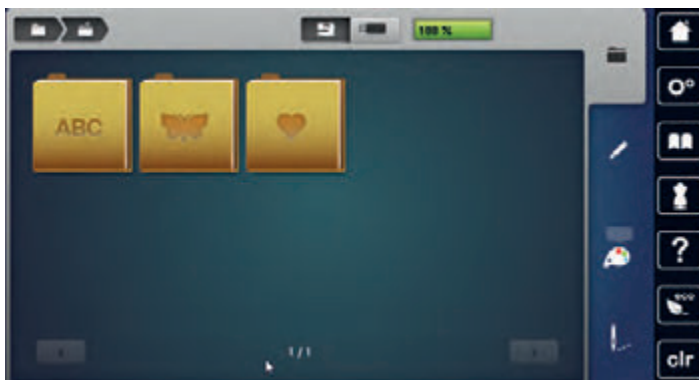



## 2.11 Embroidery hoop

### Overview embroidery hoop selection

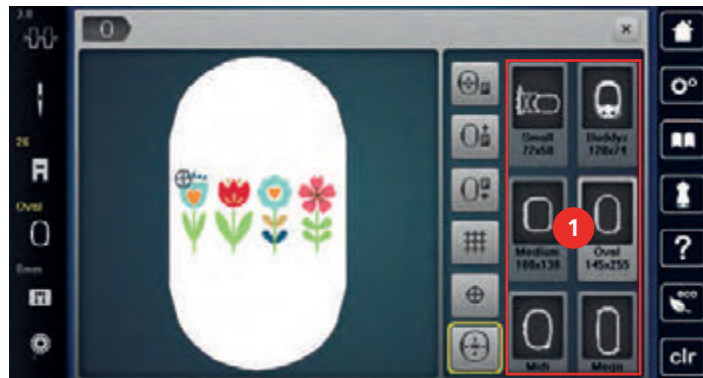

- 1 Hoop selection

### Selecting the embroidery hoop

The best embroidery result is achieved when the smallest possible embroidery hoop for the embroidery motif is selected.

The embroidery motif has a pre-set size which is displayed.

Prerequisite:

- The embroidery motif is selected.



- > Touch the icon «Hoop selection».
  - The machine selects the optimal embroidery hoop according to the size of the embroidery motif automatically. If the pre-set embroidery hoop would not be available, another desired embroidery hoop can be selected. When an embroidery hoop is attached which does not correspond with the selected one, the attached hoop is considered active and the embroidery motif area is displayed accordingly.
- > Select the desired embroidery hoop.

### Tear-away stabilizers

Using a stabilizer ensures more stability of the embroidery project. A tear-away stabilizer suits all woven and non-stretch materials. 1 – 2 layers can be used. Stabilizers are available in different weights. With larger embroidered areas the stabilizer will remain under the embroidery thread. The stabilizer is applied to the wrong side of the fabric with temporary adhesive spray. Carefully tear away excess stabilizer after embroidering.

### Cut-away stabilizers


Using a stabilizer ensure more stability of the embroidery project. A cut-away stabilizer suits all elastic materials. 1 – 2 layers can be used. Stabilizers are available in different weights. With larger areas to be embroidered the stabilizer will remain under the embroidery thread. The stabilizer is applied to the wrong side of the fabric with temporary adhesive spray. Carefully cut away excess stabilizer after embroidering.




## Preparing the embroidery hoop

The embroidery hoop consists of an outer and an inner hoop. There is a corresponding template for every hoop. The area to be embroidered is marked in 1 cm (0.39 inch) squares. The center and corner points are marked with holes. The required marks can be transferred to the material.


- > Mark the center of an embroidery motif on the fabric, using a water-soluble pen.

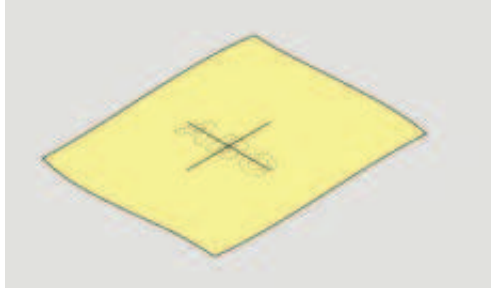

- > Loosen the screw on the outer hoop.
- > Remove the inner hoop.
- > Make sure that the arrows marks of both hoops match.
- > Attach the template holder.
- > Place the template in the inner hoop, so the BERNINA logo is at the front edge at the arrow mark until it clicks into place.

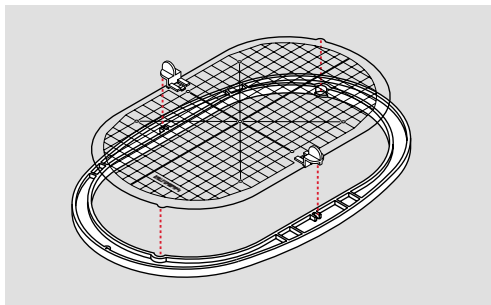


- > Place the material under the inner hoop.
- > Line up the marked center point on the center of the template.
- > Place the material and the inner hoop on the outer hoop so that the arrows of both hoops match.

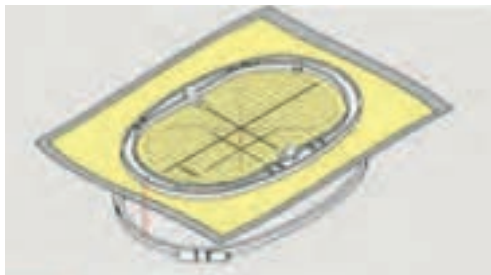

- > Fit the hoops into each other; ensure that the material does not move.
- > Hoop the fabric to be embroidered tightly.
- > Tighten the screw.
- > Remove the template from the hoop by using the template holder.
- > To avoid scratches on the free arm, press the inner hoop into the outer hoop so that the inner hoop including the fabric protrudes downwards by up to 1 mm.


## Attaching the hoop

- > Raise the needle.
- > Raise the embroidery foot.
- > Hold the hoop with the right side of the fabric up with the attaching mechanism to the left.
- > Position the hoop under the embroidery foot.
- > Press both attaching mechanisms (1) of the hoop towards each other.
- > Position the embroidery hoop (2) above the bracket of the embroidery arm.
- > Press the hoop down until it clicks in position.
- > Release the attaching mechanism (1).

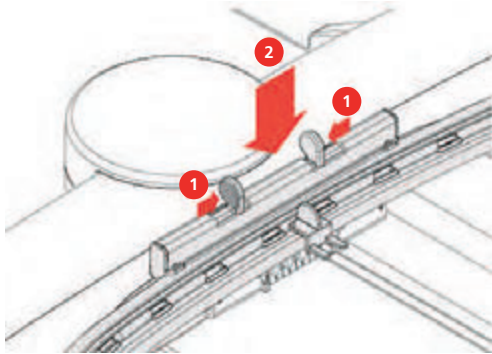

- > Press the attaching mechanisms of the hoop towards each other to remove the hoop.
- > Remove the hoop.

## Overview embroidery functions

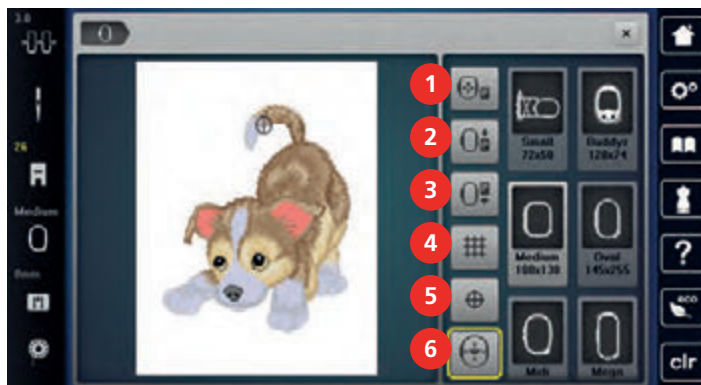

- |   |   |   |                            |
|---|---|---|----------------------------|
| 1 | Centering the embroidery hoop to the needle | 4 | Grid on/off                |
| 2 | Moving the embroidery hoop to the back      | 5 | Center of embroidery motif |
| 3 | Moving the embroidery hoop to the left      | 6 | Virtual positioning        |

### Centering the embroidery hoop to the needle

Relocating the embroidery hoop facilitates threading when the needle is close to the embroidery hoop.



 
> Touch the icon «Embroidery hoop display/Embroidery hoop selection».



> Touch the icon «Center the embroidery hoop to the needle» or



> Push the button «Center the embroidery hoop to the needle».  
> Thread the upper thread (see page 39).

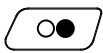

> Press the button «Start/Stop» to move the embroidery hoop back to the last position.

### Moving the hoop to the back

To facilitate changing the bobbin, it is recommended to move the hoop to the back before threading. This makes it easier to open the bobbin cover.



> Touch the icon «Embroidery hoop display/Embroidery hoop selection».



> Touch the icon «Move the hoop to the back» or



> Push the button «Move the hoop to the back».  
> Thread the bobbin thread (see page 44).



> Push the button «Start/Stop» to move the embroidery hoop back to the last position. Pull the upper thread if necessary.

### Moving the embroidery arm to the left



> Touch the icon «Embroidery hoop display/Embroidery hoop selection».  
> Remove the hoop.



> Touch the icon «Move the embroidery arm to the left».  
– An animation «Remove the embroidery hoop» appears.



 
> Touch the icon «Confirm» to bring the embroidery hoop to the left into the parking position.

### Grid on/off

When the center of the hoop and the grid are displayed, the embroidery motif can be positioned more exactly.



> Touch the icon «Embroidery hoop display/Embroidery hoop selection».

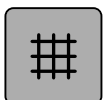

> Touch the icon «Grid on/off» to display the center of the hoop on the display.  
> Touch the icon «Grid on/off» again to display the grid.  
> Touch the icon «Grid on/off» again so that the center of the hoop and the grid disappear.

## Locating the center of the embroidery motif

The embroidery hoop is positioned so that the needle is exactly above the center of the embroidery motif or the motif begin.



> Touch the icon «Embroidery hoop display/Embroidery hoop selection».



> Touch the icon «Center of embroidery motif» or



> push the button «Center of embroidery motif» to position the embroidery hoop so that the needle is exactly above the center of the embroidery motif.

> Touch the icon «Center of embroidery motif» again or

> push the button «Center of embroidery motif» again to position the embroidery hoop so that the needle is exactly above the pattern begin.

## Virtual positioning of the embroidery hoop

The embroidery hoop is automatically moved to the new position as soon as the embroidery motif is repositioned. Therefore, the icon «Virtual positioning» is activated automatically and outlined in yellow when an embroidery hoop is attached.

Prerequisite:

- The hoop is attached.



> Touch the icon «Embroidery hoop display/Embroidery hoop selection».



> Touch the icon «Virtual positioning» to deactivate the automatic movement of the hoop when having repositioned the embroidery motif.

– The icon «Virtual positioning» is not outlined in yellow.

> Touch the icon «Virtual positioning» again to activate the automatic movement of the hoop when having repositioned the embroidery motif.

## 3 Setup Program

### 3.1 Embroidery settings

#### Adjusting the upper thread tension

Alterations of the upper thread tension in the Setup Program affect all embroidery motifs.



> Touch the icon «Setup Program».



> Touch the icon «Embroidery settings».



> Touch the icon «Alter the upper thread tension».

> Move the slide using the touchscreen pen/finger or touch the icons «+» or «-» to alter the upper thread tension.

#### Adjusting the maximum embroidering speed

By using this function, the maximum speed can be reduced.



> Touch the icon «Setup Program».



> Touch the icon «Embroidery settings».



> Touch the icon «Alter the maximum speed».

> Move the slide using the touchscreen pen/finger or touch the icons «+» or «-» to alter the maximum speed.

#### Centering or opening embroidery motifs in the original position

When the embroidery motif is opened on the machine, it is always centered to the embroidery hoop. If you want the embroidery motif to be opened in its original position (defined by the BERNINA embroidery software), the function «Center the embroidery motif» must be activated.



> Touch the icon «Setup Program».



> Touch the icon «Embroidery settings».



> Touch the icon «Center the embroidery motif».



> Press the switch in the right section.

– A previously moved embroidery motif which has been saved in the new position is opened in the saved position after selecting.

> Press the switch in the right section again.

– The embroidery motif is centered to the embroidery hoop.

## Calibrating the embroidery hoop

The calibration of the embroidery hoop is the coordination of the needle to the center of the embroidery hoop.

Prerequisite:

- The embroidery module is connected and the embroidery hoop with the appropriate embroidery template is attached.



> Touch the icon «Setup Program».



> Touch the icon «Embroidery settings».



> Touch the icon «Calibrate the embroidery hoop».  
 > Select the desired embroidery hoop and follow the instructions in the display.  
 > Touch the icon «Delete» (1) to delete the present calibration.  
 > Center the needle via the arrow icons on the display.



## Entering the fabric thickness

If the fabric thickness is more than 4 mm as for e.g. toweling, it is recommended to select 7.5 mm or 10 mm. The thicker the fabric, the slower the embroidery speed of the machine. When the machine is switched off, the alterations are reset to the default setting 4 mm.



> Touch the icon «Setup Program».



> Touch the icon «Embroidery settings».



> Touch the icon «Select the fabric thickness».  
 > Select fabric thickness.



## Activating/Deactivating the function thread away

To pull the thread end out of the fabric being cut, the function must be activated. For embroidery motifs with long stitches, it is recommended to deactivate the function thread away. When the distance between the presser foot and the embroidery hoop is too short, the function is not carried out.



> Touch the icon «Setup Program».



> Touch the icon «Embroidery settings».



> Touch the icon «Thread away».



- > To activate the function thread away, set the switch to «I».
- > To deactivate the function thread away, set the switch to «0».

## Programming the securing stitches

Embroidery motifs are programmed either with or without securing stitches. The machine recognizes when no securing stitches are programmed and adds some. If securing stitches are not wanted, they can be deactivated.



> Touch the icon «Setup Program».



> Touch the icon «Embroidery settings».



> Touch the icon «Securing stitches on/off».



- > Press the switch in the upper right section to deactivate the securing stitches at the start.
  - If the embroidery motif has programmed securing stitches, they will be embroidered.
  - If the embroidery motif doesn't have any programmed securing stitches, none are embroidered.
- > Press the switch again to activate the securing stitches at the start.
  - If the embroidery motif has programmed securing stitches, they will be embroidered.
  - If the embroidery motif doesn't have any programmed securing stitches, the securing stitches are added and will be embroidered.
- > Press the switch in the lower right section to deactivate the securing stitches at the end.
  - If the embroidery motif has programmed securing stitches, they will be embroidered.
  - If the embroidery motif doesn't have any programmed securing stitches, none are embroidered.
- > Press the switch again to activate the securing stitches at the end.
  - If the embroidery motif has programmed securing stitches, they will be embroidered.
  - If the embroidery motif doesn't have any programmed securing stitches, the securing stitches are added and will be embroidered.

## Adjusting the thread cut



- > Touch the icon «Setup Program».



- > Touch the icon «Embroidery settings».



- > Touch the icon «Thread cut settings».



- > Touch the switch in the upper portion of the display (1) to deactivate the automatic thread cut before the thread is changed.
- > Touch the switch in the upper portion of the display (1) again to activate the automatic thread cut before the thread is changed.
- > Touch the switch in the middle section of the display (2) so that the machine will stop after about 7 stitches and the remaining thread can be cut manually.
- > Touch the switch in the middle section of the display (2) again and the machine won't stop for a manual thread cut.
- > Touch the icons «-» or «+» (3) to adjust the length from where the connecting stitches are cut.
- > Touch the yellow-framed icon to reset any alterations to default setting.

## Changing the measuring unit

The measuring unit in the embroidery mode can be changed from mm to inch. The standard setting is in mm.



- > Touch the icon «Setup Program».




- > Touch the icon «Embroidery settings».



- > Touch the icon «Change measuring unit».
- > Touch the icon «Inch» (2) to change the measuring unit in the embroidery mode to inch.

- > Touch the icon «mm» (1) to change the measuring unit in the embroidery mode to mm.

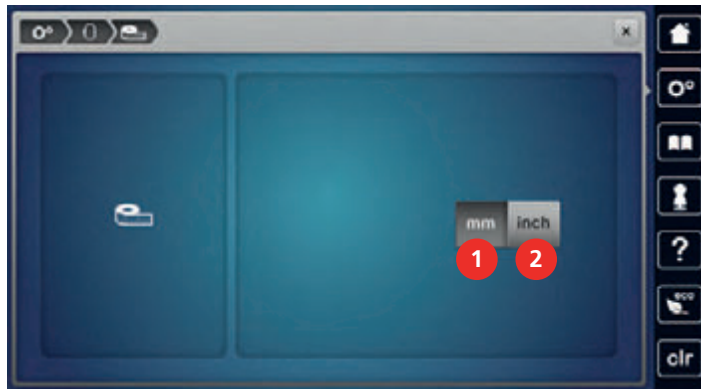

### 3.2 Selecting personal settings



- > Touch the icon «Setup Program».



- > Touch the icon «Personal settings».
- > Select the desired color of the display and the background.
- > Touch the text box above the color settings.



- > Enter the welcome text.
- > Touch the icon «ABC» (standard setting) to use upper-case letters.
- > Touch the icon «abc» to use lower-case letters.
- > Touch the icon «123» to use figures and mathematical symbols.
- > Touch the icon «@&!» to use special characters.
- > Touch the text box above the keyboard to delete the entered text completely.
- > Touch the icon «DEL» to delete individual syllables of the entered text.



- > Touch the icon «Confirm».

### 3.3 Monitoring functions

#### Activating the upper thread indicator



- > Touch the icon «Setup Program».



- > Touch the icon «Monitoring settings».



- > Touch the switch in the upper portion of the display to deactivate the upper thread indicator.
- > Touch the switch again to activate the upper thread indicator.

#### Activating the bobbin thread indicator



- > Touch the icon «Setup Program».



- > Touch the icon «Monitoring settings».



- > Touch the switch in the lower section of the display to deactivate the bobbin thread indicator.
- > Touch the switch again to activate the bobbin thread indicator.

### 3.4 Activating the audio signals



- > Touch the icon «Setup Program».




- > Touch the icon «Audio signals».
- > Touch the switch (1) to deactivate any audio signals in general.
- > Touch the switch (1) again to activate any audio signals in general.
- > Touch the icons «1 – 4» in the section (2) to set up the desired signal for the selection of a embroidery motif.



- > Touch the icon «Loudspeaker» in the section (2) to deactivate the signal for the selection of a embroidery motif.
- > Touch the icon «Loudspeaker» again to activate the signal for the selection of a embroidery motif.



- > In the section (3) touch the icons «1 – 4» to activate the signal for the selection of functions.
- > In the section (3) touch the icon «Loudspeaker» to deactivate the signal for the selection of functions.
- > In the section (3) touch the icon «Loudspeaker» again to activate the signal for the selection of functions.

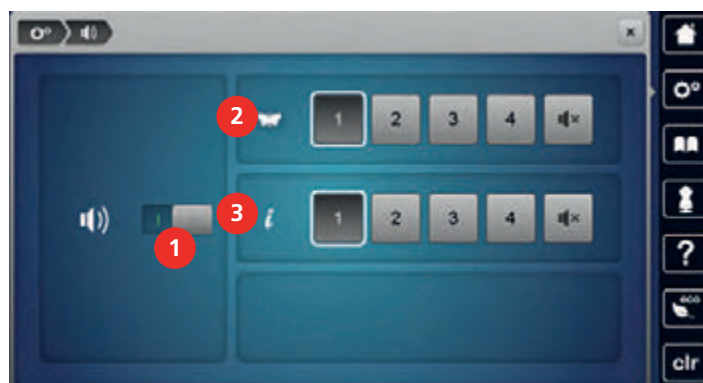

### 3.5 Machine settings

#### Selecting a language

The User Interface can be programmed in different languages according to the customer's wish because BERNINA provides a wide range of international languages for the customers. Via firmware updates additional languages for the User Interface can be provided.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Language selection».

> Select a language.

#### Adjusting the brightness of the display

The brightness of the display can be adjusted corresponding to the personal preferences.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Adjust the brightness».

> Move the slide in the upper portion of the display using the touchscreen pen/finger or touch the icons «+» or «-» to alter the brightness of the display.

#### Adjusting the sewing light

The brightness of the sewing light can be adjusted corresponding to the personal preferences.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Adjust the brightness».

> Move the slide in the upper portion of the display using the touchscreen pen/finger or touch the icons «+» or «-» to alter the brightness of the sewing light.



> Touch the switch to switch the sewing light off.

> Touch the switch again to switch the sewing light on.

## Calibrating the display

Please find further information on this topic in the chapter attachment below troubleshooting at the end of the instruction manual.



> Touch the icon «Setup Program».




> Touch the icon «Machine settings».



> Touch the icon «Calibrate the display».

> Touch the crosses in sequence using the touchscreen pen.

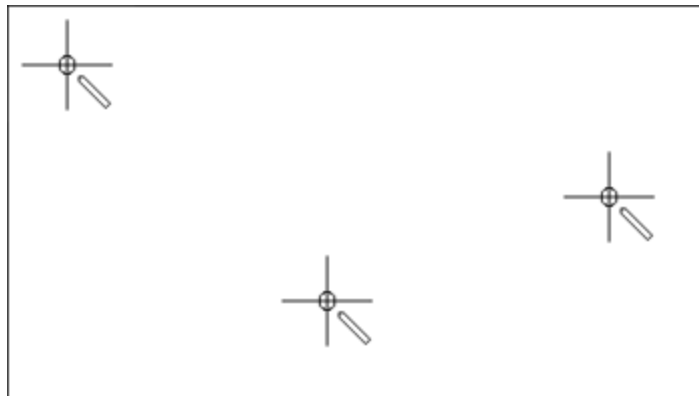

## Back to basic setting

**ATTENTION:** Using this function will delete all individually made settings.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Default settings».



> Touch the icon «Default setting embroidery».



> Touch the icon «Confirm» and restart the machine to restore all default settings.

## Deleting user data

Motifs which are not needed anymore can be deleted so that there will be more capacity for new motifs.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Basic settings».



> Touch the icon «Delete personal embroidery motifs».



> Touch the icon «Confirm» to delete all embroidery motifs from the personal memory.

### Deleting motifs on the BERNINA USB Stick

When motifs which won't be needed anymore are saved on the BERNINA USB Stick (Optional accessory), the stick can be connected to the machine and the data can be deleted.

> Insert the BERNINA USB Stick (Optional accessory) into the den USB port of the machine.

> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Basic settings».



> Touch the icon «Delete data from USB Stick».



> Touch the icon «Confirm» to delete all data on the BERNINA USB Stick (Optional accessory).

### Updating the machine Firmware

The latest firmware of the machine and a detailed step-by-step instruction for updating processes can be downloaded at [www.bernina.com](http://www.bernina.com). In general, personal data and settings are automatically transferred during a firmware update. For reasons of safety, it is also recommended to save data and settings on a BERNINA USB stick (optional accessory) before the firmware update is started. If personal data and settings should get lost during a firmware update, they can be transferred to the machine again afterwards.

#### NOTICE

The BERNINA USB stick (optional accessory) has been removed too early

Firmware has not been updated and the machine cannot be used.

> Remove the BERNINA USB stick (optional accessory) only after the update has been completed successfully.

> Insert the BERNINA USB stick (optional accessory), FAT32 formatted, providing the latest software into the port.

> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Maintenance/Update».



> Touch the icon «Update the machine».



> Touch the icon «Save data on USB stick».  
– The icon is checkmarked in green.



> Touch the icon «Update» to start the update of the firmware.

## Recovering saved data

If personal data and settings after a software update are not available anymore, they can be transferred to the machine again afterwards.

### NOTICE

The BERNINA USB stick (optional accessory) has been removed too early

Saved data cannot be transferred and the machine cannot be used.

> Remove the BERNINA USB stick (optional accessory) only after the saved data has been transferred successfully.

> Insert the BERNINA USB stick (optional accessory) providing the saved data and settings into the USB port of the machine.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Maintenance/Update».



> Touch the icon «Update the machine».



> Touch the icon «Transfer saved data to machine».  
– The icon is checkmarked in green.

## Cleaning the thread catcher

In chapter «Maintenance and cleaning» there are additional illustrated step-by-step instructions.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».





> Touch the icon «Maintenance/Update».



> Touch the icon «Clean the thread catcher».  
> Clean the thread catcher according to the instructions on the display.

### Lubricating the machine

The Setup Program provides animations how the machine has to be oiled. In chapter «Maintenance and cleaning» there are additional illustrated step-by-step instructions. Always use BERNINA oil to lubricate.



CAUTION

#### Electronically driven components

Risk of injury near the needle and the hook.

> Switch the machine off and disconnect it from the power supply system.

NOTICE

#### Lubricating the hook

Too much oil can pollute the fabric and the thread.

> Always sew a test sample first.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Maintenance/Update».



> Touch the icon «Lubricate the machine».  
> Lubricate the machine according to the instructions on the display.

### Packing the embroidery module

To pack the embroidery module into the original packaging without moving the embroidery arm manually, the embroidery arm needs to be brought to its packing position.

Prerequisite:

- The embroidery module is connected with the machine.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Maintenance/Update».



> Touch the icon «Pack position for the embroidery module».  
> Follow the instructions on the display.

### Checking the firmware version

Both the firmware and the hardware version of the machine and the attached embroidery module are displayed.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Information».



> Touch the icon «Firmware and hardware information».

### Reviewing the total number of stitches

The total number of stitches of the machine as well as the number of stitches since the last service carried out by the specialized BERNINA dealer are displayed.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Information».



> Touch the icon «Firmware und Hardware Informationen».

## Registering details of the dealer

The contact details of your specialized BERNINA dealer can be registered.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Information».



> Touch the icon «Dealer details» to enter the information of the specialized dealer.



> Touch the icon «Name of the shop» to enter the name of the specialized BERNINA dealer.



> Touch the icon «Address» to enter the address of the specialized BERNINA dealer.



> Touch the icon «Phone» to enter the telephone number of the specialized BERNINA dealer.



> Touch the icon «Internet» to enter the Internet homepage or the email address of the specialized BERNINA dealer.

## Saving Service data

Service data concerning the status quo of the machine can be saved on a BERNINA USB stick (Optional accessory) and then given to the BERNINA dealer this way.

> Insert a BERNINA USB stick (Optional accessory) which provides enough free memory space into the USB port.



> Touch the icon «Setup Program».



> Touch the icon «Machine settings».



> Touch the icon «Information».



> Touch the icon «Service data».

> Touch the icon «LOG».

– The icon «LOG» is outlined in white.

> Only when the icon is not outlined in white anymore, remove the BERNINA USB Stick (Optional accessory).

## 4 System settings

### 4.1 Calling up the tutorial

The tutorial provides information and explanations on different sections concerning embroidering.



- > Touch the icon «Tutorial».
- > Select the desired topic to get information.

### 4.2 Calling up the Embroidery Consultant

The Embroidery Consultant provides information about decision support concerning embroidery projects. After entering the desired embroidery project and the fabric, suggestions for the suitable needle and the suitable embroidery foot are displayed.



- > Touch the icon «Embroidery Consultant».
- > Select the embroidery project.
- > Select the fabric which is to be embroidered.
- > Touch the icon «Confirm».
  - If the embroidery motif has already been selected, a warning appears that it will be overwritten.

### 4.3 Calling up the Help



- > Touch the window in the display where help is needed.
- > Touch the icon «Help» to start the help mode.
- > Touch the icon in the display where help is needed.
  - Assistance concerning the selected icon is displayed.

### 4.4 Using eco mode

During a longer interruption of work the machine can be set into a power save mode. The power save mode also serves as a child safety feature. Nothing can be selected in the display and the machine cannot be started.



- > Touch the icon «eco».
  - The display goes to sleep. The power consumption is reduced and the sewing light is off.
- > Touch the icon «eco» again.
  - The machine is ready for use.

### 4.5 Cancelling any alterations with «clr»

Any alterations to motifs can be reset to default setting. Exceptions are saved motifs which have been filed in the personal memory and monitoring functions.



- > Touch the icon «clr».

 
## 5 Creative embroidering

### 5.1 Overview embroidering



- |   |   |   |                         |
|---|---|---|-------------------------|
| 1 | Embroidery time/Embroidery motif size in mm or inch         | 4 | «i»-Dialog              |
| 2 | Scaling up, downsizing and moving the embroidery motif view | 5 | Embroidery motif layers |
| 3 | Area to be embroidered                                      |   |                         |

### 5.2 Selecting and changing the embroidery motif

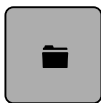


- > Touch the icon «Selection».



- > Touch the icon «Upload embroidery motif».
- > Select a new embroidery motif.

### 5.3 Checking the embroidery time and the embroidery motif size

In the selection menu «Editing» the estimated embroidery time in minutes as well as the width and height of the embroidery motif is indicated at lower left (1).

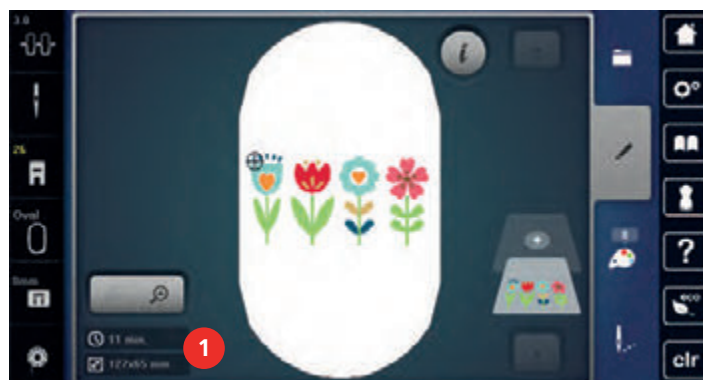

### 5.4 Regulating the speed

The sewing speed can be adjusted infinitely variable with the slide.

- > Move the slide to the left to reduce the sewing speed.
- > Move the slide to the right to increase the sewing speed.

## 5.5 Editing the embroidery motif

### Overview Editing embroidery motif



- |   |                         |    |   |
|---|-------------------------|----|---|
| 1 | Moving the view         | 10 | Mirror image up/down  |
| 2 | Moving the motif        | 11 | Duplicating   |
| 3 | Zoom out                | 12 | Endless Embroidery  |
| 4 | Zoom in                 | 13 | Deleting  |
| 5 | Moving the motif        | 14 | Check embroidery motif size   |
| 6 | Rotating the motif      | 15 | Bending the text  |
| 7 | Altering the size       | 16 | Grouping embroidery motifs  |
| 8 | Pinpoint placement      | 17 | Changing the sequence within an embroidery motif combination (appears by scrolling) |
| 9 | Mirror image left/right | 18 | Altering the stitch type/stitch density (appears by scrolling)                      |

### Scaling up the embroidery motif view

The view of the embroidery motif can be scaled up. In addition to that, the view can be adjusted with or without changing the embroidery position.

- > Select an embroidery motif.
- > Touch the icon «Zoom in» to edit the view of the embroidery motif.



- > Touch the icon «Zoom in» 1 to 4 times to enlarge the view of the embroidery motif gradually.



- > Touch the icon «Zoom out» 1 to 4 times to get back to the Edit Mode.



### Downsizing the embroidery motif view

The view of the embroidery motif can be downsized. In addition to that, the view can be adjusted with or without changing the embroidery position.

- > Select an embroidery motif.
- > Touch the icon «Zoom in» to edit the view of the embroidery motif.



- > Touch the icon «Zoom out» 1 to 4 times to downsize the view of the embroidery motif gradually.



## Moving the embroidery motif view

The view of the embroidery motif can be moved. In addition to that, the view can be adjusted with or without changing the embroidery position.



- > Select an embroidery motif.
- > To activate the icon «Move the view», touch the icon «Zoom in».



- > Touch the icon «Move the view».
  - The icon turns dark gray.
- > Alter the view of the embroidery motif.
  - The embroidery position is not altered.



- > Touch the icon «Zoom out» to get back to the Edit Mode.

## Moving the embroidery motif in enlarged view

The view of the embroidery motif can be moved. In addition to that, the view can be adjusted with or without changing the embroidery position.



- > Select an embroidery motif.
- > To activate the icon «Move the view», touch the icon «Zoom in».



- > Touch the icon «Move the stitch pattern».
- > Move the view of the embroidery motif using the touchscreen pen/finger.
  - The embroidery position is altered.



- > Touch the icon «Zoom out» to get back to the Edit Mode.

 
## Moving the embroidery motif



- > Select an embroidery motif.
- > Touch the icon «i»-Dialog.



- > Touch the icon «Move the stitch pattern».
- > Turn the «Upper Multifunction knob» to move the embroidery motif horizontally in 1/10-mm steps.
- > Turn the «Lower Multifunction knob» to move the embroidery motif vertically in 1/10-mm steps or
- > touch the embroidery motif, keep it pressed and move it as you like.
  - The relocation is indicated in the yellow-framed icons.

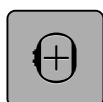


- > Touch the icon «Center of the embroidery motif».
  - The embroidery motif is repositioned in the center of the embroidery hoop.

## Rotating motif



 - > Select an embroidery motif.
- > Touch the icon «i»-Dialog.

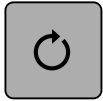

- > Touch the icon «Rotate the motif».
- > Turn the «Upper Multifunctional knob» or the «Lower Multifunctional knob» to the right to rotate the embroidery motif clockwise.
- > Turn the «Upper Multifunctional knob» or the «Lower Multifunctional knob» to the left to rotate the embroidery motif counter-clockwise.



- > Touch the icon «Rotate the motif +90°» to rotate the embroidery motif in 90°-steps.

## Altering the embroidery motif size proportionally



Enlargements or reductions of the motif size up to maximum 20% achieve the best results.

If the motif size is to be altered by more than 20%, the motif should be adapted in a separate embroidery software and then reloaded onto the machine.



- > Select an embroidery motif.
- > Touch the icon «i»-Dialog.



- > Touch the icon «Alter the embroidery size».



- > Touch the icon «Retain the proportions» so that the icon is outlined in white.



- > Turn the «Upper/Lower Multifunction knob» to the right to scale up the embroidery motif proportionally.
- > Turn the «Upper/Lower Multifunction knob» to the left to downsize the embroidery motif proportionally.

## Altering the embroidery motif size disproportionally



Enlargements or reductions of the motif size up to maximum 20% achieve the best results.

 
If the motif size is to be altered by more than 20%, the motif should be adapted in a separate embroidery software and then reloaded onto the machine.

- > Select an embroidery motif.





> Touch the icon «i»-Dialog.

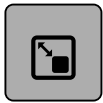

> Touch the icon «Alter the embroidery size».



> To alter the embroidery motif disproportionately, touch the icon «Retain the proportions» so that the icon is not framed in white.



- > Turn the «Upper Multifunctional knob» to move the embroidery motif horizontally.
- > Turn the «Lower Multifunctional knob» to alter the embroidery motif vertically.

### Mirroring embroidery motifs

Embroidery motifs can be mirror-imaged both vertically and horizontally.



- > Select an embroidery motif.
- > Touch the icon «i»-Dialog.



> Touch the icon «Mirror image left/right» to mirror the embroidery motif vertically.



> Touch the icon «Mirror image up/down» to mirror the embroidery motif horizontally.

### Bending the text

Texts can be arranged and designed arc-shaped.



- > Create an alphabet embroidery motif.
- > Touch the icon «i»-Dialog.



- > Touch the icon «Bend text».
- > Turn the «Upper Multifunctional knob» to alter the distance between the characters in millimeter-steps.
- > Turn the «Lower Multifunctional knob» to the left or to the right to bend the lettering upwards or downwards.

## Changing the stitch type

If the satin stitches are too long, they can be changed to step stitches.

- > Select an embroidery motif.
- > Touch the icon «i»-Dialog.



- > Touch the icon «Change the stitch type».



- > Touch the switch in the upper section of the display (1) to change the satin stitch to the step stitch.
- > Adjust the desired stitch length (2) with the icons «-» or «+».

## Altering the stitch density

If the satin stitches are embroidered too densely, the stitch density can be adjusted.

- > Select an embroidery motif.
- > Touch the icon «i»-Dialog.



- > Touch the icon «Change the stitch type».
- > Adjust the desired stitch density (1) with the icons «-» or «+».

 


## Checking the embroidery motif size and position

It can be checked whether or not the embroidery motif matches the designated position/location on the fabric. Points which are beyond the embroidery hoop are not traveled to.

- > Select the embroidery motif.
- > Touch the icon «i»-Dialog.



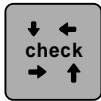

> Touch the icon «Check the embroidery motif size» or



- > push the button «Check the embroidery motif size».
  - The embroidery hoop travels all the way until the needle is at the position as it is indicated in the display.
- > Touch the icon «Corner top left» to select the top left corner of the embroidery motif.
  - The embroidery hoop travels all the way until the needle is at the position as it is indicated in the display.
- > Touch the icon «Corner top right» to select the top right corner of the embroidery motif.
  - The embroidery hoop travels all the way until the needle is at the position as it is indicated in the display.
- > Touch the icon «Corner bottom left» to select the bottom left corner of the embroidery motif.
  - The embroidery hoop travels all the way until the needle is at the position as it is indicated in the display.
- > Touch the icon «Corner bottom right» to select the bottom right corner of the embroidery motif.
  - The embroidery hoop travels all the way until the needle is at the position as it is indicated in the display. If the embroidery motif hasn't been positioned correctly yet, the position can be altered via the «Upper/Lower Multifunctional knobs» and the complete embroidery positions can be checked again.



> Touch the icon «Center of the embroidery motif» or



- > push the button «Center of the embroidery motif» to bring the needle to the center of the embroidery motif.
- > Turn the «Upper Multifunctional knob» to move the embroidery motif horizontally.
- > Turn the «Lower Multifunctional knob» to move the embroidery motif vertically.



## Endless embroidery

When embroidering a border, it is advantageous to use the «Mega-Hoop» (optional accessory) or the «Maxi-Hoop» (optional accessory). The embroidery project requires less rehooping. We recommend marking reference lines on the fabric, and using the template when hooping and rehooping. Here, the reference lines must run parallel to the lines on the template. In the following example, the supplied «Oval-Hoop» is used.

- > Select an embroidery motif.
- > Touch the icon «i»-Dialog.



- > Touch the icon «Endless Embroidery».
  - The embroidery motif will be duplicated as many times as possible to fill the hoop.
  - The reference points, which are necessary when rehooping the fabric, are added.



- > Add further reference points, if necessary, using the arrow icons (1).
- > Turn the «Upper Multifunctional knob» or touch the icons «-/» (2) to enter the number of embroidery motifs.
- > Turn the «Lower Multifunctional knob» or touch the icons «-/» (3) to determine the distance between the embroidery motifs.
- > Touch the icon «Fit to hoop» (4) to adjust the size of the motifs automatically so they all fit in the hoop.



- > Touch the icon «Confirm».



- > Touch the icon «i»-Dialog.



- > Touch the icon «Embroidering».




- > Push the button «Start/Stop» and embroider the border.
  - The embroidery motif must be embroidered completely.



- > Touch the icon «Endless Embroidery» when the reference points have been embroidered.
  - An animation indicates that the fabric must be rehooped.



- > Remove the hoop and rehoop the fabric so that the stitched out reference points are in the upper part of the embroidery area and at least 3 cm (1.18 inch) from the top edge of the hoop.
- > Attach the hoop.
- > Touch the icon «Confirm».
  - The embroidery hoop is moved automatically close to the reference point.
  - The icon «AUTO» is activated and the hoop moves automatically near the last reference point.
- > Via the arrow icons, determine on which side of the embroidered part the next reference point shall be placed.
- > Turn the «Upper Multifunctional knob» or the «Lower Multifunctional knob» to position the hoop exactly.

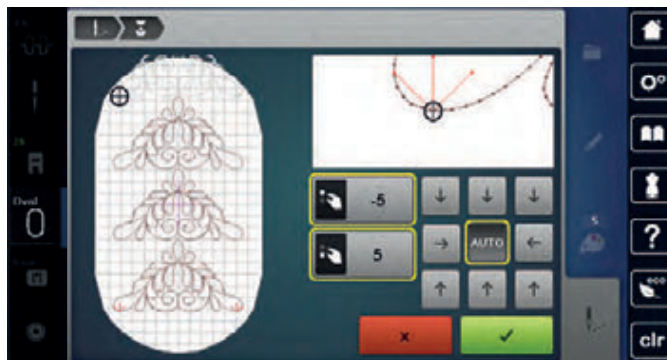

- > Touch the icon «Confirm».
- > Push the button «Start/Stop» and resume embroidering.
- > Repeat these steps until the desired length of the border is embroidered.




## Duplicating the embroidery motif

- > Select an embroidery motif.
- > Touch the icon «i»-Dialog.



- > Touch the icon «Duplicate».
- The embroidery motif (1) is duplicated (2).

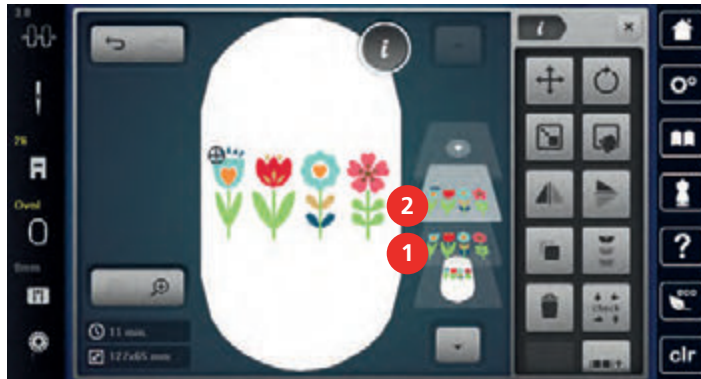

## Deleting an embroidery motif

The active embroidery motif is deleted.

- > Select an embroidery motif.
- > Touch the icon «i»-Dialog.



- > Touch the icon «Delete».



## Changing the sequence within an embroidery motif combination

The sequence of the embroidery motifs within the embroidery motif combination can be changed.

Prerequisite:

- The embroidery motif combination has been created or the motif has been ungrouped.

- > Select the desired embroidery motif which is to be repositioned.
- > Touch the icon «i»-Dialog.



- > Touch the icon «New Allocation».



- > Touch the icon «Scroll up» to position the selected embroidery motif further up within the sequence.



- > Touch the icon «Scroll down» to position the selected embroidery motif further down within the sequence.

## Undoing entries

All entries can be undone and redone again step by step.

Prerequisite:

- An embroidery motif has been selected and alterations have been done.



- > Touch the icon «Undo» to cancel the last entry.
- > Touch the icon «Undo» several times to cancel the last entries step by step.



- > Touch the icon «Redo» to restore the last entry.
- > Touch the icon «Redo» several times to restore the last entries step by step.

## Grouping embroidery motifs

Embroidery motifs can be added to a combination or removed. The grouped embroidery motifs can be edited like one single embroidery motif.

The sequence of the embroidery motifs in the combination can be changed (see page 77).

As soon as an embroidery motif has been ungrouped, in other words, it has been decomposed in different elements/colors, the colors won't be recomposed. With alphabets, the jumpstitch length needs to be adjusted to 1 in the Setup so that ungrouping will work with all the letters.

- > Create an embroidery motif combination.
- > Select an embroidery motif (1) within the embroidery motif combination.



- > Touch the icon «i»-Dialog.

 


- > Touch the icon «Group».



- > Touch the icon «Group».
  - The embroidery motif above the selected embroidery motif is added to the embroidery motif combination.

- > Select an embroidery motif combination.

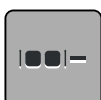


- > Touch the icon «Ungroup».
  - The combination is ungrouped.

or

- > Create an embroidery motif combination.


- > Select all embroidery motifs (2).

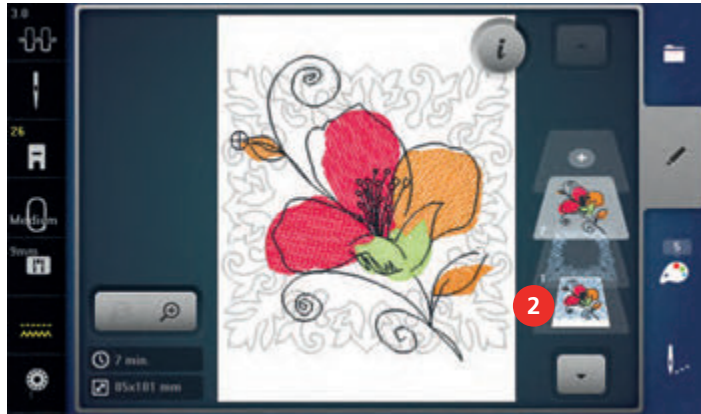

- > Touch the icon «i»-Dialog.



 - > Touch the icon «Group».
  - All embroidery motifs are added to the embroidery motif combination.
- > Select an embroidery motif combination.

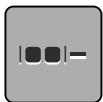

- > Touch the icon «Ungroup».
  - The combination is ungrouped.

## 5.6 Pinpoint placement

### Positioning of grid points

This function allows the exact positioning of the embroidery motif on the fabric in an easy way. The positioning points can be placed in the grid.

 
Prerequisite:

- Any two points of the embroidery motif are marked with chalk or a water-soluble pen on the fabric. The place or the location where the embroidery motif is to be positioned is clearly visible.

- > Select an embroidery motif.
- > Touch the icon «i»-Dialog.



- > Touch the icon «Pinpoint placement».

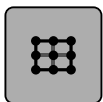

- > Touch the icon «Grid».
  - The embroidery motif is given a grid with nine different location/positioning points.
- > Select the desired positioning point to which the embroidery motif is to be adjusted.
  - The point changes its color.


- > Turn the «Upper Multifunctional knob» or the «Lower Multifunctional knob» to the left or to the right to position the needle above the respective mark on the fabric.



- > Touch the icon «SET» to confirm the altered position.
  - The point changes its color and is defined.
- > Select the second positioning point of the embroidery motif.



- > Turn the «Upper Multifunctional knob» or the «Lower Multifunctional knob» to the left or to the right to position the needle above the respective mark on the fabric.

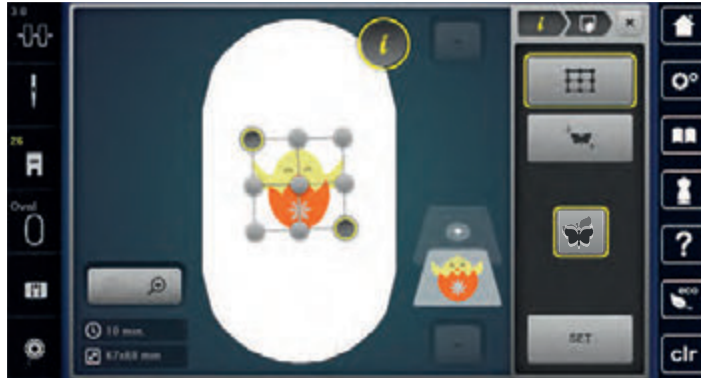

- > Touch the icon «SET» to confirm the altered position.
  - The point changes its color and is defined. The embroidery motif is adjusted accordingly.
- > Touch the icon «Reset Pinpoint placement» to reset the alterations to default setting.



### Free point positioning

This function allows the exact positioning of the embroidery motif on the fabric in an easy way. The points can be defined as you like within the embroidery motif.

Prerequisite:

- Any two points of the embroidery motif are marked with chalk or a water-soluble pen on the fabric. The place or the location where the embroidery motif is to be positioned is clearly visible.

- > Select an embroidery motif.
- > Touch the icon «i»-Dialog.



- > Touch the icon «Pinpoint placement».



- > Touch the icon «Place points as desired».
- > Define a desired point within the embroidery motif.
  - The positioning point is displayed.
- > Turn the «Upper Multifunctional knob» or the «Lower Multifunctional knob» to the left or to the right to position the needle above the respective mark on the fabric.



- > Touch the icon «SET» to confirm the altered position.
  - The point changes its color and is defined.



- > Select the second positioning point of the embroidery motif.





## Deleting a single embroidery motif

Prerequisite:

- A combination of embroidery motifs has been created.
- > In the section of the embroidery motif level (1) touch the desired embroidery motif with the finger, keep it pressed and move it outwards.
  - A new window opens.




- > Touch the icon «Confirm» to delete the selected embroidery motif.

## Duplicating the embroidery motif

- > Select an embroidery motif.
- > Touch the icon «i»-Dialog.



- > Touch the icon «Duplicate».
- The embroidery motif (1) is duplicated (2).

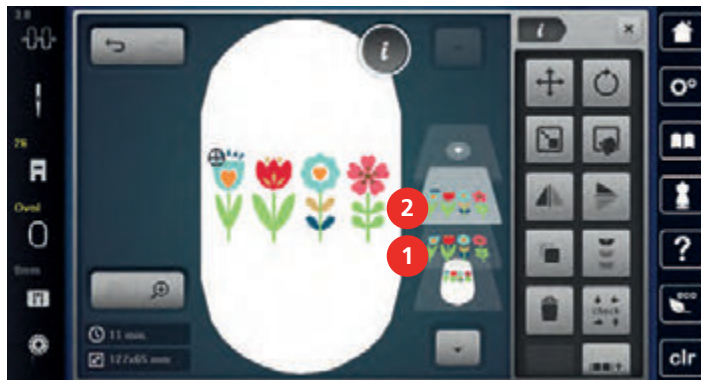

## Duplicating a combination

When a combination is duplicated, the individual embroidery motifs cannot be selected anymore.

- > Select an embroidery motif.
- > Touch the icon «Add motif».
- > Select another embroidery motif.
- > Select the combination (1).



- > Touch the icon «i»-Dialog.





Embroidery motif		Name
<i>ABE</i>		Lisa
<i>ABC</i>		Zürich
ABC	A B C	Swiss Block
ABC		Quilt Block
A B C		Old English
АБВ	А Б В	Russian Textbook
ABC		Happy Times
ABC		Chicago

### Creating words/sentences



Lettering is always embroidered in one color. To embroider single letters or single words in another color, every letter or every word has to be selected individually and placed in the area to be embroidered.

Lettering can be positioned within the hoop as you like. When the embroidery motif is positioned outside the embroidering area, the hoop is outlined in red on the display. With the hoop selection it can be checked whether or not the embroidery motif can be embroidered in another hoop. When the lettering does not fit in any hoop, two single words can be combined and positioned below each other as the following example will show.



- > Select the file «Alphabets».
- > Select the font.
- > Enter the text «Made to».
- > Touch the icon (1) (standard setting) to use upper case letters.
- > Touch the icon (2) to use lower case letters.
- > Touch the icon (3) to use numbers and mathematic characters.

- > Touch the icon (4) to use special characters.



- > Touch the text box above the keyboard to delete the entered text completely.
- > Touch the icon «DEL» to delete single letters of the entered text.



- > Touch the icon «Confirm» to accept the text.

 


- > Touch the icon «Embroidery hoop display/Embroidery hoop selection».
- > Select the hoop.
- > Touch the icon «Embroidery hoop display/Embroidery hoop selection» again to go back to the Edit Mode.

### Editing words/sentences




- > Touch the icon «i»-Dialog.

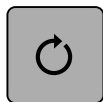


- > Touch the icon «Rotate the motif».



 - > Touch the icon «+90» to rotate the text by 90°.
- > Touch the icon «i» (1).

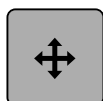


- > Touch the icon «Move the stitch pattern».
- > Turn the «Upper Multifunctional knob» to move the embroidery motif horizontally.
- > Turn the «Lower Multifunctional knob» to move the embroidery motif vertically.

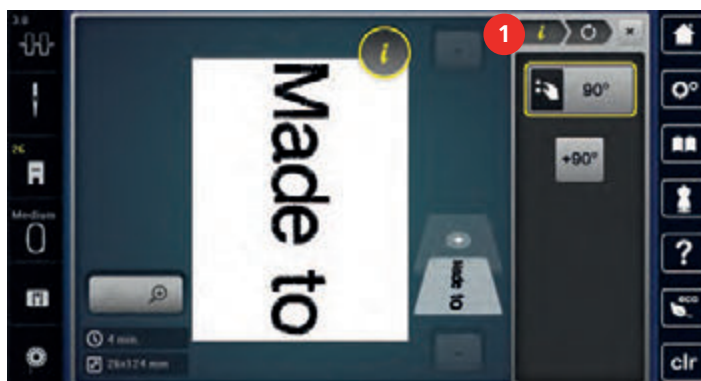

- > Touch the icon «Add motif».
- > Enter and also rotate the text «create».


 
> Touch the icon «Embroidery hoop display/Embroidery hoop selection».

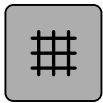

> Touch the icon «Grid on/off» to position the text lines more exactly.



## 5.9 Changing the colors of the embroidery motif

### Overview changing the color



- |   |                             |   |                      |
|---|-----------------------------|---|----------------------|
| 1 | Colors of embroidery motifs | 4 | Altering color/brand |
| 2 | Preview for selected color  | 5 | Color information    |
| 3 | Allocating thread brand     |   |                      |

 
### Changing the colors



Lettering is always embroidered in one color. To embroider single letters or single words in another color, every letter or every word has to be selected individually and placed in the area to be embroidered.



- > Select an embroidery motif.
- > Touch the icon «Color information».

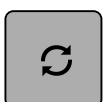

> Touch the icon «Alter color/brand» next to the color which is to be changed.



> Touch the icon «Scroll right» in the lower portion of the display to display other colors.




- > Touch the icon «Color selection by number» to select the color by entering the color number.
- > Select the desired color.
- > The color selection must be confirmed by touching the color bar on the right side.

### Altering the colors via the color wheel


14




- > Touch the icon «Color information».
- > Touch the icon «Color wheel» (1).

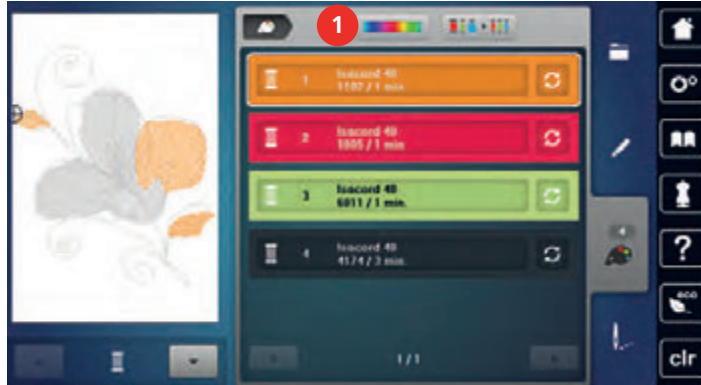

- > Turn the round knob (2) with the the touchscreen pen/finger clockwise or counter-clockwise or turn the «Upper Multifunction knob» to alter the colors of the embroidery motif.

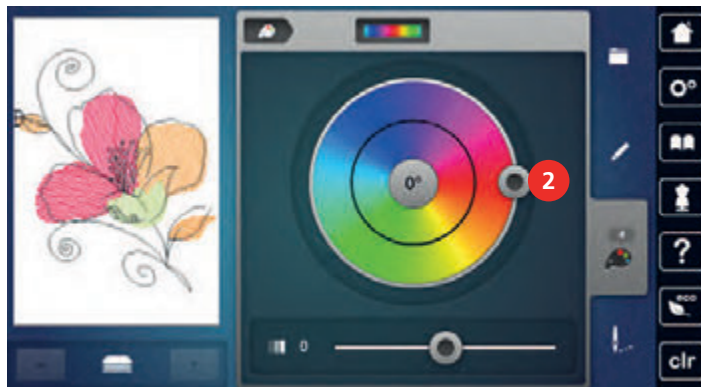

- > Move the slide (3) with the the touchscreen pen/finger to alter the brightness of the colors.

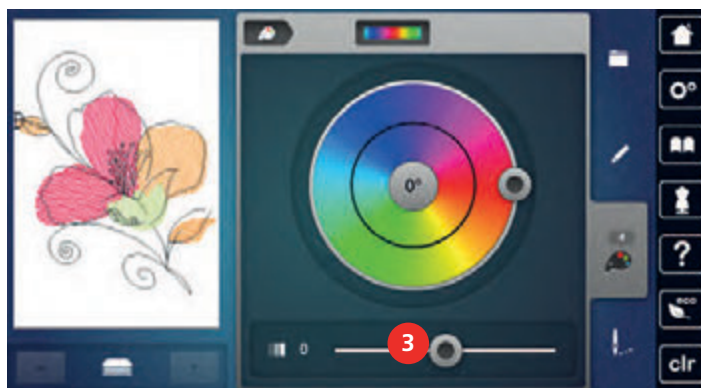


- > Touch the icon «Edit».
  - The embroidery motif appears in the new colors.



### Changing the thread brand



 - > Select the embroidery motif.
- > Touch the icon «Color information».

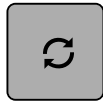

- > Touch the icon «Alter color/brand».




- > To show more thread brands, touch the icons «Scroll left» and «Scroll rights» in the upper part of the screen.



- > Touch the icon «Allocate thread brand».
  - Any thread colors of the selected embroidery motif will be matched with the selected thread brand.

## 5.10 Embroidering the embroidery motif

### Overview Embroidery menu

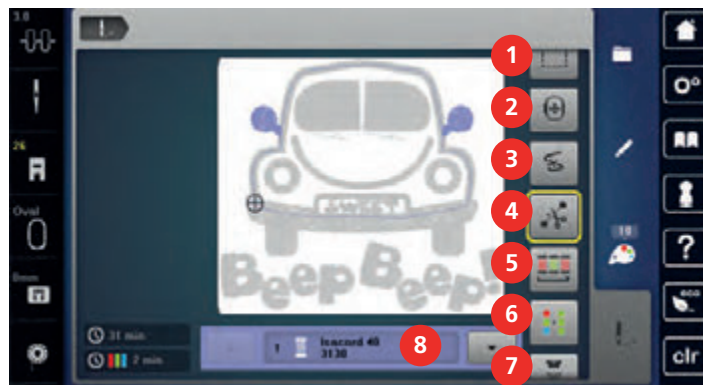


- |   |  |   |                                       |
|---|--|---|---------------------------------------|
| 1 | Basting  | 5 | Reducing color changes                |
| 2 | Moving the hoop                                    | 6 | Multi-colored embroidery motif on/off |
| 3 | Embroidery sequence control when the thread breaks | 7 | Endless Embroidery                    |
| 4 | Cutting connecting stitches                        | 8 | Color indication                      |

### Adding basting stitches

 The basting stitches can be embroidered along the embroidery motif. Therefore the connection between the fabric and the stabilizer can be improved.



- > Select an embroidery motif.
- > Touch the icon «Embroidering».

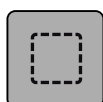

- > Touch the icon «Basting» to embroider basting stitches along the embroidery motif.
- > Touch the icon «Basting» again to embroider basting stitches along the embroidery hoop.
- > Touch the icon «Basting» again to deactivate the basting stitches.



## Moving the hoop

If the embroidery motif is so big that repeated rehooping is necessary, the embroidered motif can be moved again.



- > Select an embroidery motif.
- > Touch the icon «Embroidering».



- > Touch the icon «Move the hoop».
- > Turn the «Upper Multifunctional knob» to move the hoop horizontally.
- > Turn the «Lower Multifunctional knob» to move the hoop vertically.



- > Touch the icon «Embroidering» in the process navigation to accept the settings.

## Embroidery sequence control when thread breaks

When the thread breaks, the needle can be repositioned in the embroidery motif by means of the embroidery sequence control.



- > Select an embroidery motif.
- > Touch the icon «Embroidering».



- > Touch the icon «Embroidery sequence control when thread breaks».
  - In the left portion of the display a compact view of the embroidery motif is displayed. On the right side the enlarged embroidery motif is displayed.
- > Select the desired position in the compact view using the touchscreen pen/finger.
- > Turn the «Upper Multifunctional knob» to move the hoop stitch by stitch.
- > Turn the «Lower Multifunctional knob» to move the hoop in large steps.
  - The number in the yellow-framed icon indicates the number of stitches within the embroidery sequence.



 
- > Touch the icon «0-9» to select the desired stitch by entry.

## Cutting connecting stitches

The function is activated by default and the connecting stitches are cut automatically. When the function is deactivated, the connecting stitches between the embroidery motifs must be cut manually.



- > Select an embroidery motif.
- > Touch the icon «Embroidering».

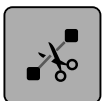

- > Touch the yellow-framed icon «Cut the connecting stitches» to deactivate the function.
- > Touch the yellow-framed icon «Cut the connecting stitches» again to activate the function.


## Reducing color changes

 When the embroidery motifs overlap, the color changes **cannot** be reduced.

- > Select an embroidery motif.
- > Touch the icon «Embroidering».



- > Touch the icon «Reduce thread change».
- Identical colors of the embroidery motif are collected to one color.

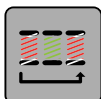


## Multi-colored embroidery motif on/off

Multi-colored embroidery motifs can also be embroidered in one color.

- > Select an embroidery motif.
- > Touch the icon «Embroidering».



 - > Touch the icon «Multi-colored embroidery motif on/off».
- The embroidery motif is embroidered in one color.

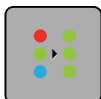

## Endless Embroidery

Allows to resume embroidering borders which have already been started even if the machine has been switched off and on again.

Prerequisite:

- An embroidery motif for borders must be saved in the Personal Memory. The reference points must be defined in the embroidery motif.

- > Select border embroidery motif from the Personal Memory.
- > Touch the icon «Embroidering».




- > The icon «Endless embroidery» becomes visible in the right bar by scrolling upwards.
- > Touch the icon «Endless Embroidery».



- > Remove the hoop and rehoop the fabric so that the stitched out reference points are in the upper part of the embroidery area and at least 3 cm (1.18 inch) from the top edge of the hoop.
- > Attach the hoop.

- > Touch the icon «Confirm».
  - The hoop is moved automatically near the last stitch.
  - The icon «AUTO» is activated and the hoop moves automatically near the last reference point.
- > Via the arrow icons, determine on which side of the embroidered part the next reference point shall be placed.
- > Turn the «Upper Multifunctional knob» or the «Lower Multifunctional knob» to position the hoop exactly.

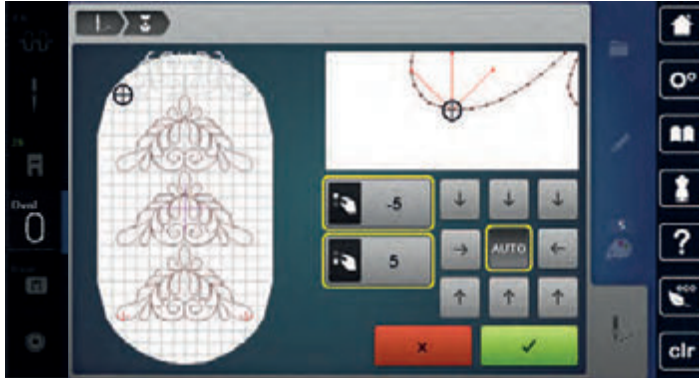

- > Touch the icon «Confirm».
- > Push the button «Start/Stop» and resume embroidering.
- > Repeat these steps until the desired length of the border is embroidered.

### Color indication

Every color of the embroidery motif can be selected individually. The hoop moves to the first stitch of the current color. The currently active color can be embroidered individually or in another sequence.

- > Select an embroidery motif.
- > Touch the icon «Embroidering».
- > Touch the icon «Scroll down» to select the next color of the embroidery motif.
- > Touch the icon «Scroll up» to select the previous color of the embroidery motif.

## 5.11 Free arm embroidering

Free arm embroidering is defined as embroidering tubular fabrics or garments which are positioned around the free arm of the embroidery machine while being embroidered. Often used with sleeves, pant legs or other narrow-tailored garments.



A tubular piece of fabric can be pulled over the free arm of the machine easily when the free arm is positioned to the left in parking position before the hoop is attached or removed. Push the button «Start/Stop» to move the embroidery hoop back to the embroidery position again.

Make sure to use a full bobbin as the embroidery hoop needs to be removed for changing the bobbin.

 
Borders can be closed to a ring easily and exactly along the edge of the tube. Before embroidering the last embroidery motif, after rehooping the fabric, activate the function «Pinpoint placement» in the edit mode. Using the subfunction «Free point positioning» align the still missing embroidery motif precisely.

The movability of the embroidery arm can be limited or impeded with very narrow tubes. Therefore please make sure that the embroidery hoop can move forwards and backwards sufficiently. An impediment of the embroidery arm caused by a tube which is too tight can result in embroidery motif offset or in damaging the fabric.

### Check the movability of the free arm

Please note: With tiny fabric tubes, deactivate the thread-away in the Setup Program if necessary.

- > Open the embroidery motif on the machine and edit as desired.
- > Mark the embroidery motif position and the size on the fabric in a suitable way.
- > Select the embroidery hoop as small as possible.
- > Hoop or stick the fabric along with the appropriate stabilizer in the embroidery hoop, depending on the stabilizer.
- > Pull the fabric tube carefully over the free arm of the machine and attach the embroidery hoop at the clutch of the embroidery module.
- > If necessary, reposition the embroidery motif.
- > Previously check whether the embroidery hoop can be moved forwards and backwards according to the embroidery motif size.

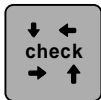

- > Touch the icon «Check embroidery motif size».
- > After the successful check of the embroidery motif size, start the embroidery process.

Detailed instructions about embroidery, the use of suitable materials or selecting the required embroidery settings of the machine can be found in the «Tutorial» under embroidery techniques --> Embroidering.

## 5.12 Administering embroidery motifs

### Administering embroidery motifs



 
- |   |                              |   |                             |
|---|------------------------------|---|-----------------------------|
| 1 | Loading the embroidery motif | 3 | Saving the embroidery motif |
| 2 | Adding an embroidery motif   | 4 | Deleting                    |



## Saving embroidery motifs in the personal memory

In the filing system «Personal memory» any stitch patterns, also those which have been individually edited, can be saved.

- > Select an embroidery motif.
- > Edit the embroidery motif.
- > Touch the icon «Selection».

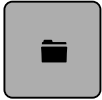

- > Touch the icon «Save the motif».
  - The embroidery motif to be saved is outlined in yellow.
  - The icon «Embroidery machine» is activated.



- > Touch the icon «Confirm».

## Saving the embroidery motif on the BERNINA USB stick

- > Select an embroidery motif.
- > Edit the embroidery motif.
- > Touch the icon «Selection».



- > Touch the icon «Save the motif».
  - The embroidery motif to be saved is outlined in yellow.
- > Insert the BERNINA USB stick into the USB port of the machine.



 
- > Touch the icon «USB stick».



- > Touch the icon «Confirm».

## Overwriting the embroidery motif in the personal memory

- > Select an embroidery motif.
- > Edit the embroidery motif.
- > Touch the icon «Selection».

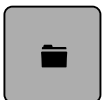

- > Touch the icon «Save the motif».
  - The embroidery motif to be saved is outlined in yellow.
  - Touch the icon «Embroidery machine» is activated.



 
- > Select the embroidery motif which is to be overwritten.








- > Touch the icon «Confirm».

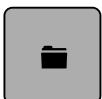



## Overwriting the embroidery motif on the BERNINA USB stick

- > Select an embroidery motif.
- > Edit the embroidery motif.
- > Touch the icon «Selection».





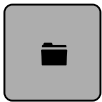

-  > Touch the icon «Save the motif».
  - The embroidery motif to be saved is outlined in yellow.
-  > Insert the BERNINA USB stick into the USB port of the machine.
-  > Touch the icon «USB stick».
-  > Select the embroidery motif which is to be overwritten.
-  > Touch the icon «Confirm».

### Loading an embroidery motif from the personal memory



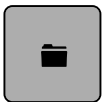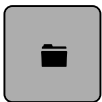


-  > Touch the icon «Selection».
-  > Touch the icon «Upload embroidery motif».
-  > Select the file «Personal embroidery motifs».
-  > Select an embroidery motif.

### Loading an embroidery motif from the BERNINA USB stick







-  > Touch the icon «Selection».
-  > Insert the BERNINA USB stick into the USB port of the machine.
-  > Touch the icon «USB stick».
-  > Select a personal embroidery motif.

### Deleting an embroidery motif from the personal memory

The embroidery motifs which are saved in the personal memory can be deleted individually.

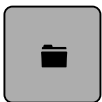-  > Touch the icon «i»-Dialog.
-  > Touch the icon «Delete».
-  – Touch the icon «Embroidery machine» is activated.
-  > Select the embroidery motif which is to be deleted.
-  > Touch the icon «Confirm».

### Deleting an embroidery motif from the BERNINA USB stick

-  > Touch the icon «Selection».
-  > Touch the icon «Delete».
-  > Insert the BERNINA USB stick into the USB port of the machine.
-  > Touch the icon «USB stick».
-  > Select the embroidery motif which is to be deleted.
-  > Touch the icon «Confirm».



## 6 Embroidery

### 6.1 Embroidering via the button «Start/Stop»


In case of a power cut the embroidery process is interrupted. After the restart the machine goes to the position which was embroidered last.



- > Push the button «Start/Stop» to start the embroidery machine.
  - All parts of the motif being in the current color are embroidered.
  - The embroidery machine stops automatically at the end.
  - Both threads are cut automatically.
  - The embroidery machine switches to the next color automatically.



- > Change the upper thread.
- > Push the button «Start/Stop» to embroider the new color.
- > After completing the embroidery motif, finish the embroidering process by touching the icon «Finishing the embroidering process» (1) or embroider the motif again by touching the icon «Endless embroidery»(2).

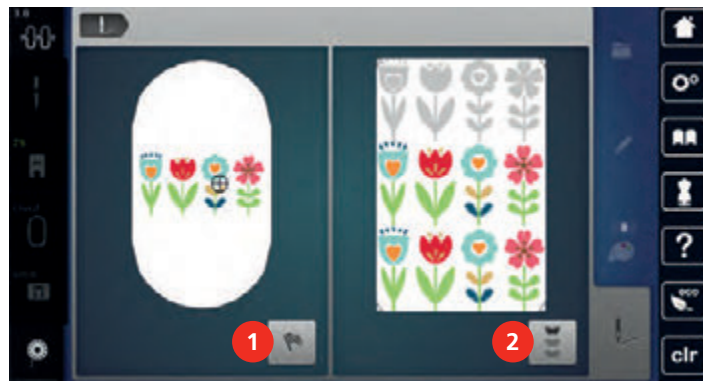

### 6.2 Increasing the embroidery speed

To ensure the best embroidery quality, the speed when embroidering is reduced depending on the embroidery position. Choose between the two options to either embroider at optimal or maximum speed. Standard = optimal speed. It has to be considered that the quality of the embroidered embroidery motif at maximum speed cannot be ensured.

By switching the machine off and on, the optimal embroidery speed is activated.

Prerequisite:



- The embroidery motif is selected.
- > Touch the icon «Embroidery speed».
  - The maximum speed is activated.
- > Touch the icon «Embroidery speed» again.
  - The optimal speed is activated.



### 6.3 Adjusting the upper thread tension

The default setting of the upper thread tension is determined automatically after an embroidery motif is selected.

The upper thread tension is set optimally at the BERNINA factory and the machine has been tested. Metrosene-/Seralon thread size 100/2 (Company Mettler, Switzerland) is used for upper and bobbin thread.

When using other types of embroidery threads, the optimal tension may vary. Therefore it may be necessary to adjust the upper thread tension according to the embroidering project as well as the desired the embroidery motif individually.

The higher the upper thread tension, the tighter the upper thread which means that the bobbin thread is pulled up to the top of the fabric. When the upper thread tension is low, the upper thread is less tightened which means that the bobbin thread is pulled up less.

Alteration of the upper thread tension affect all embroidery motifs. Permanent alterations of the upper thread tension can be made in the Setup Program (see page 54).



- > Touch the icon «Upper thread tension».
- > Move the slide with the touchscreen pen or the finger to increase or reduce the upper thread tension.



- > Touch the yellow-framed icon on the right side to reset the alteration to default setting.
- > If the upper thread tension had been changed in the Setup Program, touch the yellow-framed icon on the left to reset the alterations to default setting in the **Setup Program**.

### 6.4 Embroidering via the foot control (Optional accessory)

Embroidering via the foot control is recommended when only a short sequence has to be embroidered. While embroidering, the foot control must be pressed down all the time.

- > Press the foot control to start embroidering.

## 7 Attachment

### 7.1 Maintenance and cleaning

#### Cleaning the display

- > Clean the display in the switched off status with a soft slightly damp microfiber cloth.

#### Removing thread remnants under the stitch plate



##### Electronically driven components

Risk of injury near the needle and the hook.

- > Switch the machine off and disconnect it from the power supply system.

Remove the thread remnants under the stitch plate regularly.

- > Remove the presser foot and the needle.
- > Remove the stitch plate.



- > Remove the thread remnants under the stitch plate.

#### Cleaning the hook



##### Electronically driven components

Risk of injury near the needle and the hook.


- > Switch the machine off and disconnect it from the power supply system.

- > Open the bobbin cover.
- > Remove the bobbin case.
- > Push the fastening bracket to the left.



- > Flap down the fastening bracket along with the black hook race cover.

- > Remove the hook.

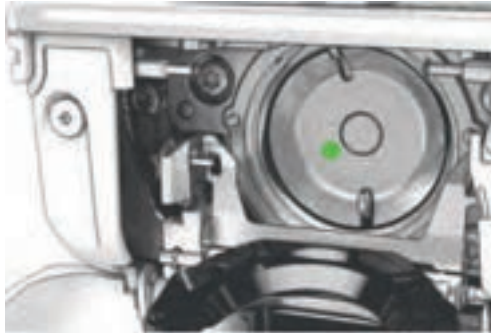

- > Clean the hook race area with the brush; never use a sharp instrument.
- > Hold the hook at the pin in the center with two fingers.
- > Lead the hook, lower edge ahead, angular top-down behind the hook race cover.
- > Position the hook with the two lugs meeting the openings in the hook, the colored mark on the hook driver should be visible through the hole in the hook.
- > Insert the hook.
  - The hook is magnetic and therefore fastened to the correct position.
- > Close the hook race cover and the fastening bracket until the release bracket engages.
- > As a check, turn the handwheel.
- > Insert the bobbin case.

### Lubricating the hook



CAUTION

#### Electronically driven components

Risk of injury near the needle and the hook.

- > Switch the machine off and disconnect it from the power supply system.

NOTICE

#### Lubricating the hook


Too much oil can pollute the fabric and the thread.

- > Always sew a test sample first.
- > Remove the bobbin case.
- > Push the fastening bracket to the left.



- > Flap down the fastening bracket along with the black hook race cover.

- > Remove the hook.

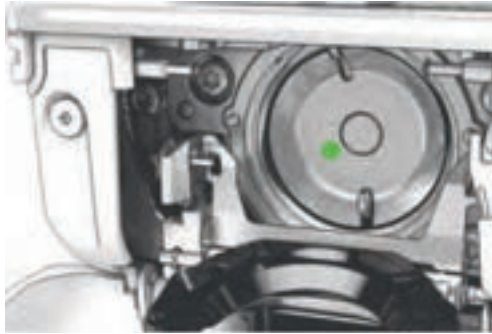

- > Give one drop of BERNINA oil down in the hook race.




- > Give one drop of oil in each of the two oil depots so that the felts are damp and make sure that the red-marked surface of the hook sleeve remains free of oil.



- > Hold the hook at the pin in the center with two fingers.
- > Lead the hook, lower edge ahead, angular top-down behind the hook race cover.
- > Position the hook with the two lugs meeting the openings in the hook, the colored mark on the hook driver should be visible through the hole in the hook.
- > Insert the hook.
  - The hook is magnetic and therefore fastened to the correct position.
- > Close the hook race cover and the fastening bracket until the release bracket engages.
- > As a check, turn the handwheel.
- > Insert the bobbin case.







## 7.2 Troubleshooting

Failure	Cause	Repair
<b>Uneven stitch formation</b>	Upper thread too tight or too loose.	> Adjust upper thread tension.
	Needle blunt or bent.	> Replace the needle, make sure that a new BERNINA quality needle is used.
	Poor quality needle.	> Use a new BERNINA quality needle.
	Poor quality thread.	> Use quality thread.
	Incorrect needle/thread combination.	> Match the needle with the thread size.
	Incorrectly threaded.	> Rethread.
<b>Uneven stitch formation</b>	Incorrect bobbin case is used.	> Use the supplied bobbin case marked with the triangle.
		
<b>Skipped stitches</b>	Incorrect needle.	> Use the needle system 130/705H.
	Needle blunt or bent.	> Replace the needle.
	Poor quality needle.	> Use a new BERNINA quality needle.
	The needle is incorrectly inserted.	> Insert the needle with the flat side to the back as far up as it will go into the needle holder and tighten the screw.
	Incorrect needle point.	> Match the needle point to the texture of the material.
<b>Faulty stitching</b>	Thread remnants between the thread tension discs.	> Fold a piece of thin material and slide the folded edge (not the raw edges) between the thread tension discs.
	Incorrectly threaded.	> Rethread.
	Thread remnants below the bobbin case spring.	> Remove the thread remnants under the spring.




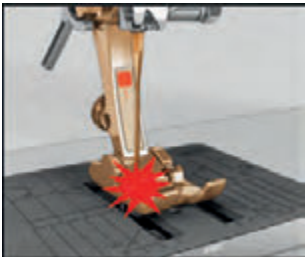


Failure	Cause	Repair
<b>The machine doesn't start</b>	Unfavorable room temperature.	<ul style="list-style-type: none"> <li>&gt; Place the machine in a warm room one hour before use.</li> <li>&gt; Connect the machine and switch it on.</li> </ul>
	The machine is damaged.	<ul style="list-style-type: none"> <li>&gt; Contact the specialized BERNINA dealer.</li> </ul>
<b>The light of the button «Start-/Stop» doesn't light up</b>	Light is defect.	<ul style="list-style-type: none"> <li>&gt; Contact the specialized BERNINA dealer.</li> </ul>
<b>Neither the sewing light nor the light on the free arm lights up</b>	The sewing light is deactivated.	<ul style="list-style-type: none"> <li>&gt; Push the button «Sewing light on/off».</li> </ul>
	Settings in the Setup Program.	<ul style="list-style-type: none"> <li>&gt; Activate it in the Setup Program.</li> </ul>
	The sewing light is defect.	<ul style="list-style-type: none"> <li>&gt; Contact the specialized BERNINA dealer.</li> </ul>
<b>Upper thread indicator doesn't react</b>	Settings in the Setup Program.	<ul style="list-style-type: none"> <li>&gt; Activate it in the Setup Program.</li> </ul>
	The upper thread indicator is defect.	<ul style="list-style-type: none"> <li>&gt; Contact the specialized BERNINA dealer.</li> </ul>
<b>Bobbin thread indicator doesn't react</b>	Settings in the Setup Program.	<ul style="list-style-type: none"> <li>&gt; Activate it in the Setup Program.</li> </ul>
	The bobbin thread indicator is defect.	<ul style="list-style-type: none"> <li>&gt; Contact the specialized BERNINA dealer.</li> </ul>
<b>Error during software update</b>	USB stick is not recognized.	<ul style="list-style-type: none"> <li>&gt; Use a BERNINA USB stick.</li> </ul>
	The update process is blocked and the hourglass on the display is inactive.	<ul style="list-style-type: none"> <li>&gt; Remove the USB stick.</li> <li>&gt; Switch the machine off.</li> <li>&gt; Switch the machine on.</li> <li>&gt; Follow the instruction on the display.</li> </ul>
	Date of the software update cannot be found.	<ul style="list-style-type: none"> <li>&gt; Unzip the update data.</li> <li>&gt; Save data of the software update directly on the data medium and not in a file on the USB stick.</li> </ul>

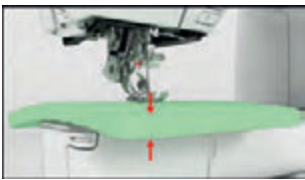
### 7.3 Error messages

Message on the display	Cause	Repair
	The selected needle and stitch plate cannot be used in combination.	<ul style="list-style-type: none"> <li>&gt; Replace the needle.</li> <li>&gt; Replace the stitch plate.</li> </ul>
	The needle is not at its top end.	<ul style="list-style-type: none"> <li>&gt; Adjust the needle position via the handwheel.</li> </ul>
	The upper thread is used up.	<ul style="list-style-type: none"> <li>&gt; Rethread.</li> </ul>
	The upper thread has broken.	<ul style="list-style-type: none"> <li>&gt; Rethread.</li> </ul>
	The bobbin thread is used up.	<ul style="list-style-type: none"> <li>&gt; Rethread.</li> </ul>
	The bobbin thread has broken.	<ul style="list-style-type: none"> <li>&gt; Clean the hook.</li> <li>&gt; Rethread.</li> </ul>
	The main motor isn't running.	<ul style="list-style-type: none"> <li>&gt; Turn the handwheel clockwise until the needle is at its top position.</li> <li>&gt; Remove the stitch plate.</li> <li>&gt; Remove the thread remnants.</li> <li>&gt; Clean the hook.</li> <li>&gt; Remove the hook and make sure that there are no pieces of broken needle points on the magnetic back of the hook.</li> </ul>
	The fabric under the presser foot is too thick.	<ul style="list-style-type: none"> <li>&gt; Reduce the fabric thickness.</li> </ul>

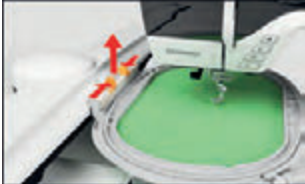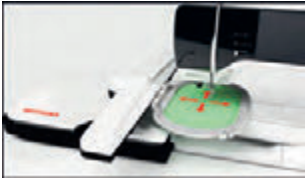

Message on the display	Cause	Repair
	The contact between the machine and the embroidery module is interrupted due to vibrations.	<ul style="list-style-type: none"> <li>&gt; Make sure that the module and the machine are standing on a stable, even surface.</li> <li>&gt; Connect the embroidery module to the machine.</li> </ul>
	The needle position doesn't correspond with the center of the hoop.	<ul style="list-style-type: none"> <li>&gt; Calibrate the hoop.</li> </ul>
	The embroidery module is not attached.	<ul style="list-style-type: none"> <li>&gt; Connect the embroidery module to the machine.</li> <li>&gt; Contact the specialized BERNINA dealer to have the machine checked.</li> </ul>
	The hoop is not attached.	<ul style="list-style-type: none"> <li>&gt; Attach the hoop.</li> </ul>
	The hoop is attached.	<ul style="list-style-type: none"> <li>&gt; Remove the hoop.</li> </ul>
	The movement of the hoop follows.	<ul style="list-style-type: none"> <li>&gt; Touch the icon «Confirm».</li> </ul>



Message on the display	Cause	Repair
 <p>The screenshot shows a maintenance message on a device screen. The title is 'Lubricating the Machine' and it says 'It is important to lubricate the machine regularly.' Below the text is a photo of a hand using a small applicator to put oil on a metal part of the machine. A large red '1X' is overlaid on the photo. Below the photo, it says 'Step 1:'.</p>	<p>The machine needs cleaning/ lubricating.</p>	<ul style="list-style-type: none"> <li>&gt; Clean the machine.</li> <li>&gt; Lubricate the machine.</li> </ul> <p>Important information on lubricating:</p> <ul style="list-style-type: none"> <li>&gt; Too much oil can pollute the fabric and the thread.</li> <li>&gt; After lubricating, always embroider on a test piece.</li> </ul>
<p>The automatic thread cutter (at the thread catcher) needs cleaning.</p>	<p>The automatic thread cutter needs cleaning. The message appears every time when the machine is started as soon as 1000 cutting cycles have been carried out.</p>	<ul style="list-style-type: none"> <li>&gt; Touch the icon «Confirm». <ul style="list-style-type: none"> <li>– The machine calls up the function «Clean the thread catcher».</li> </ul> </li> <li>&gt; Clean the thread catcher according to the instructions on the display. <ul style="list-style-type: none"> <li>– The counter for the cutting cycles is reset.</li> </ul> </li> </ul>
<p>It is time for the regular maintenance. Please contact your specialized BERNINA dealer to make an appointment.</p>	<p>The machine needs maintenance. The message appears after the programmed service interval has expired.</p> <p><b>Important information:</b> Having your machine cleaned and serviced properly at the appropriate times ensures its proper functioning and a long service life. Ignoring the terms can affect the operating life and restrict the guaranteeing. The cost allocation for maintenance work is regulated nationally. Consult your specialised dealer or your servicing shop for more details.</p>	<ul style="list-style-type: none"> <li>&gt; Contact the specialized BERNINA dealer.</li> <li>&gt; Delete the message temporarily by touching the icon «ESC».</li> </ul> <p>Having cleared the message three times, the message will appear as recently as the next service interval has been completed.</p>

## 7.4 Storage and disposal

### Storing the machine

It is recommended to store the machine in the original packaging. If the machine is stored in a cold room, place it in a warm room one hour before use.

- > Switch the machine off and disconnect it from the power supply system.
- > Don't store the machine outdoor.
- > Protect the machine against climatic influences.

### Dispose of the machine

- > Clean the machine.
- > Sort the components by their materials and dispose of them according to the local laws and regulations.

## 7.5 Technical data

Term	Value	Unit
Maximum fabric thickness	12,5 (0,49)	mm (in)
Sewing light	30	LED
Maximum speed	1000	Stitches per minute
Measurements without the spool pin (W × H × D)	522 × 358 × 214 (20,55 × 14,09 × 8,43)	mm (in)
Weight	13,5 (29,76)	kg (lb)
Energy consumption	140	W
Input voltage	100 – 240	V
Protection class (Electrical engineering)	II	

## 8 Overview stitch patterns














### 8.1 Overview Embroidery motifs

#### Editing embroidery motifs

Let your inspiration run free. A vast selection of embroidery motifs is at your disposal.

If you see one of the following pictograms below a number of the embroidery motif, you can find additional information at





[www.bernina.com/7series](http://www.bernina.com/7series).

	Detached point		Punchwork Design (motif)
	Hole embroidery		Cord embroidery
	Fringe embroidery		Projects in the hoop
	Appliqué		Puffy fonts
	CutWork Design (motif)		Quilting
	PaintWork Design (motif)		Trapunto
	CrystalWork Design (motif)		


#### Projects

Please find the detailed embroidery instructions at [www.bernina.com/700designs](http://www.bernina.com/700designs)



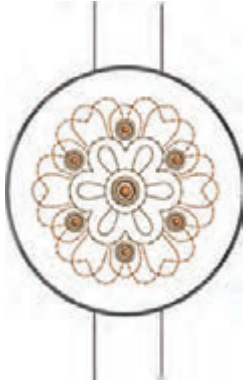















No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
BE700701  208.7 X 201.6	 	12604-02  45.0 x 152.8	 

No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
21519-03 0 108.4 x 161.2	 	19999-032 0 90.4 x 143.0	 








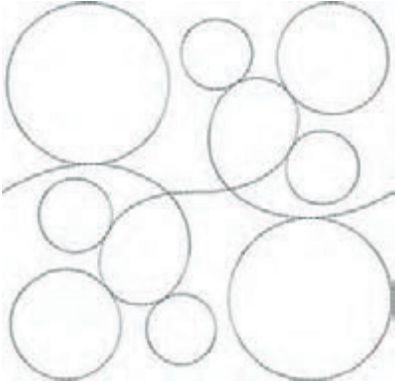










### Quilt motifs



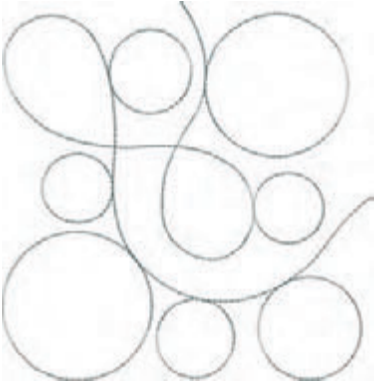

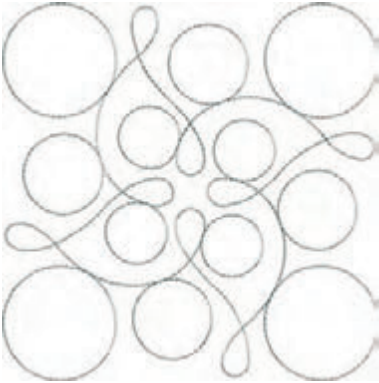
 












No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
BD289 0 95.0 x 94.7	 	BD285 0 202.0 x 201.0	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BD288  202.0 x 201.0	 	BD292  94.8 x 95.1	 
BD299  94.5 x 95.0	 	BD308  95.0 x 94.4	 
BD413  97.1 x 97.2	 	BD837  123.6 x 123.6	 










No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12380-43  123.5 x 123.5	 	12380-30  89.2 x 96.3	 
12380-04  83.1 x 89.9	 	12380-08  89.2 x 89.1	 
12380-09  111.6 x 61.6	 	12380-22  110.6 x 60.9	 


















No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12380-10  152.0 x 356.7	 	BD796  47.2 x 174.5	 
BD800  127.3 x 122.4	 	BD801  122.2 x 124.2	 
BD804  122.9 x 123.6	 	BD394  97.0 x 96.8	 

















No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BD412  89.4 x 53.2	 	BD513  63.5 x 63.4	 
BD514  63.5 x 62.9	 	BD553  113.8 x 121.1	 
BD567  107.9 x 108.2	 	BD554  109.9 x 109.9	 




Overview stitch patterns














No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BD659  66.6 x 219.1	 	BD665  160.3 x 117.8	 
HE959  120.6 x 120.6	 		













### Borders and Lace

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
82011-30 107.2 x 130.3	 	82011-28 133.6 x 99.4	 
NB952 108.2 x 119.4	 	OC00303  100.6 x 110.6	 
12410-08  80.5 x 168.3	 	12410-07  115.5 x 158.8	 







No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12410-15  29.1 x 133.5	 	12454-05  117.0 x 108.3	 
12454--06  116.6 x 47.6	 	12454-07  48.5 x 57.4	 
FA981 35.1 x 142.3	 	BE790701 113.6 x 230.1	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790704 72.5 x 217.2	 	BE790703 70.7 x 185.0	 
BE790702 73.0 x 190.5	 	21013-29 40.2 x 152.0	 
21013-30 75.8 x 75.9	 	12398-29  26.4 x 152.9	 










No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12398-30  76.8 x 76.9	 	OC33411  24.2 x 177.1	 
CM471 59.1 x 190.8	 	FB403 52.2 x 208.5	 
FQ785 92.6 x 342.0	 	FQ969 51.6 x 161.9	 





No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
FQ736 7.9 x 253.1	 	BD582 48.6 x 171.1	 
NA912 115.1 x 15.8	 	NA914 120.3 x 18.8	 
NB478 121.7 x 85.5	 	FQ945 93.8 x 95.1	 





















No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
FB422  52.3 x 33.8	 	FB423  132.9 x 53.6	 







### Children

No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
BE790305  118.3 x 145.5	 	12535-03 160.6 x 120.3	 
BE790302 68.3 x 66.3	 	BE790303 69.5 x 70.1	 














No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790304 127.2 x 65.8	 	BE790307  141.5 x 126.9	 
BE790308  191.3 x 219.6	 	12421-03 45.8 x 48.3	 
NB193 113.3 x 96.2	 	CM384 77.4 x 80.7	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
CM226  63.3 x 63.1	 	CM193  106.7 x 127.4	 
CM220  71.5 x 71.8	 	WP325 77.9 x 94.0	 
CM428 78.2 x 106.4	 	CM404 47.2 x 165.4	 














No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
CM368 70.2 x 140.1	 	CM147 55.0 x 99.6	 
CM022 89.1 x 97.1	 	CM442 46.5 x 47.0	 
CM362  120.6 x 113.0	 	WP201 76.2 x 92.0	 













No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
CM286 97.9 x 82.4	 	CK970 84.8 x 81.6	 
RC765 100.5 x 99.0	 		

## Flowers




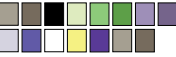








No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
80001-23 85.0 x 101.6	 	82006-02 128.6 x 205.1	 
BE790404 202.0 x 225.8	 	12392-1  112.6 x 157.4	 
12392-13 112.6 x 203.4	 	12457-13 113.1 x 130.3	 






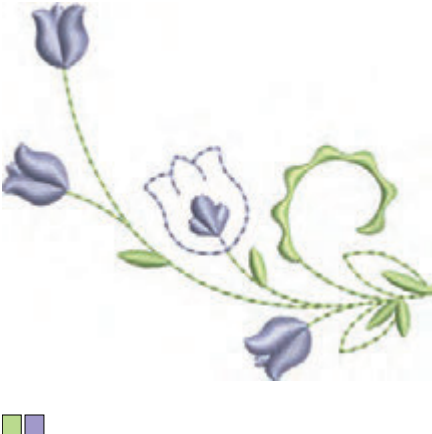
Overview stitch patterns


No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12457-06 106.3 x 172.3	 	BE790401 205.7 x 242.0	 
BE790405 125.9 x 185.4	 	FS142 69.3 x 143.8	 
82004-34  198.8 x 281.3	 	BE790409 188.4 x 215.3	 

No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
BE790402 146.5 x 280.0	 	FQ061 75.2 x 92.8	 
FQ801 46.0 x 112.5	 	FQ273 88.6 x 193.4	 
FQ055 84.6 x 100.5	 	FQ982 150.1 x 218.5	 















No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
FB268 123.7 x 87.3	 	FQ934 119.1 x 192.4	 
CM418 45.7 x 87.4	 	FQ972 111.6 x 73.2	 
FQ548 93.8 x 159.3	 	NB513 103.7 x 111.7	 







No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
FQ274 63.0 x 77.7		NB668 114.3 x 165.1	
FQ331 84.6 x 63.5		FQ738 51.6 x 101.4	
FQ434 100.0 x 162.2		FB419 64.3 x 56.5	











No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
WS673 67.7 x 170.1			

### Seasons







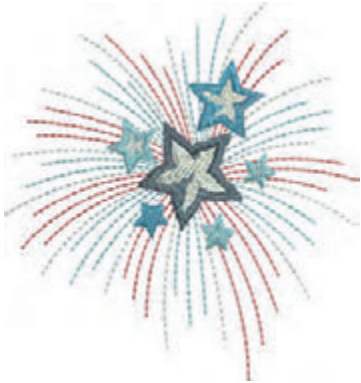





No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12384-02 132.9 x 203.4		12384-11 84.3 x 189.8	

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12443-03 120.5 x 161.4	 	12443-11 73.4 x 193.1	 
12427-01 133.8 x 167.6	 	12427-11 81.6 x 126.2	 
12400-03 123.4 x 161.3	 	12400-11 74.1 x 211.9	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
HG319 88.6 x 151.5		HG301 123.9 x 122.4	
BD603 80.7 x 78.3		HE919 89.1 x 69.2	
HG053 122.1 x 121.8		NB317 87.4 x 86.9	














No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
NB769 128.5 x 124.7	 	NA146 63.3 x 69.6	 
NB039 97.0 x 127.0	 	FQ749 77.6 x 94.8	 
HG460 91.8 x 98.1	 		













### Embellishment













No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
BE790501 199.5 x 276.4	 	WP428 132.4 x 119.0	 
12576-05 189.5 x 229.4	 	12473-04 93.6 x 184.2	 
12620-12 94.6 x 109.4	 	21008-15 119.5 x 119.9	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
82006-30  99.9 x 174.6	 	BE790503 130.0 x 130.9	 
BE790504 121.3 x 121.3	 	FB126 86.9 x 102.2	 
82005-01  175.6 x 109.1	 	21003-26  123.0 x 124.1	 















No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
82006-36  121.8 x 123.0	 	BE790403 140.0 x 130.4	 
NB018 90.3 x 97.1	 	NB728 97.5 x 112.6	 
NB403 78.1 x 78.3	 	HG079 116.0 x 116.1	 














No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
FB457 107.7 x 83.6	 	FQ881 129.2 x 129.3	 
FB336 122.0 x 122.0	 	FB377 121.0 x 92.5	 
FQ870 122.1 x 105.1	 	FB385 131.1 x 127.8	 





No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
FQ072 79.7 x 101.6	 	NB101 99.2 x 99.3	 
NB373 121.4 x 176.8	 	WS649 125.4 x 248.3	 
NB708 137.8 x 127.7	 	FB433 120.9 x 120.9	 

### Sport

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790601 80.2 x 80.2	 	BE790602 80.3 x 75.6	 
12611-08  80.0 x 119.7	 	12611-18  130.2 x 157.6	 
BE790603 80.5 x 74.8	 	BE790604 79.8 x 80.3	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790605 79.5 x 79.5	 	BE790606 100.2 x 86.0	 
BE790607 79.8 x 74.4	 	BE790608 80.3 x 80.1	 
SP980 63.2 x 63.5	 	NB036 35.7 x 69.9	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
RC244 88.4 x 53.4	 	RC675 101.6 x 79.9	 
SP266 75.8 x 54.2	 	SP989 101.6 x 82.5	 
SR067 87.5 x 96.9	  	LT870 97.5 x 57.0	 













No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
SR589 66.5 x 95.2	 	FB158 39.5 x 53.3	 



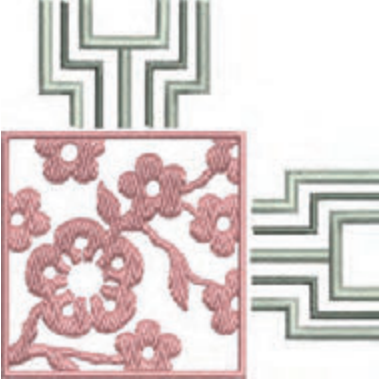

**Asia**

No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
NB124 172.4 x 132.0	 	BE790801 137.8 x 137.7	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790802 36.2 x 116.9	 	BE790803 22.4 x 215.9	 
FQ212 61.6 x 61.9	 	FB492 86.8 x 293.2	 
FQ194 120.2 x 118.5	 	FQ217 84.8 x 59.2	 









No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
FA427 111.8 x 66.1	 	FB276 124.8 x 112.1	 
FB283 102.4 x 109.4	 	FB490 67.7 x 67.7	 
FB491 31.7 x 165.6	 	NB491 79.2 x 168.4	 







No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
FB484 66.8 x 59.2	 	WP423 90.4 x 157.9	 







### Charming Monograms







No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
12587-01 58.7 x 89.7	 	12587-02 52.0 x 89.9	 





No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12587-03 45.4 x 89.9	 <input type="checkbox"/>	12587-04 56.8 x 90.6	 <input type="checkbox"/>
12587-05 50.4 x 90.2	 <input type="checkbox"/>	12587-06 57.0 x 89.7	 <input type="checkbox"/>
12587-07 39.1 x 90.4	 <input type="checkbox"/>	12587-08 61.9 x 90.3	 <input type="checkbox"/>



No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12587-15 44.5 x 90.1	 <input type="checkbox"/>	12587-16 63.2 x 89.6	 <input type="checkbox"/>
12587-17 54.2 x 89.2	 <input type="checkbox"/>	12587-18 64.1 x 90.3	 <input type="checkbox"/>
12587-19 56.1 x 90.4	 <input type="checkbox"/>	12587-20 56.9 x 89.9	 <input type="checkbox"/>













No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12587-21 62.0 x 91.1	 <input type="checkbox"/>	12587-22 64.4 x 91.3	 <input type="checkbox"/>
12587-23 64.6 x 90.2	 <input type="checkbox"/>	12587-24 62.4 x 90.7	 <input type="checkbox"/>
12587-25 51.7 x 91.5	 <input type="checkbox"/>	12587-26 67.8 x 89.6	 <input type="checkbox"/>













No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12587-53 67.4 x 22.9	 <input type="checkbox"/>	12587-54 50.1 x 106.8	 <input type="checkbox"/>
12587-55 70.5 x 144.7	 <input type="checkbox"/>	12587-56 49.0 x 100	 <input type="checkbox"/>
12587-57 57.5 x 20.3	 <input type="checkbox"/>	12587-58 52.9 x 116.3	 <input type="checkbox"/>

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
12587-59 33.0 x 94.7	 <input data-bbox="295 813 320 837" type="checkbox"/>	12587-60 126.1 x 126.0	 <input data-bbox="994 813 1019 837" type="checkbox"/>
12587-61 35.7 x 28.8	 <input data-bbox="295 1272 320 1296" type="checkbox"/>	12587-62 35.6 x 33.8	 <input data-bbox="994 1283 1019 1308" type="checkbox"/>


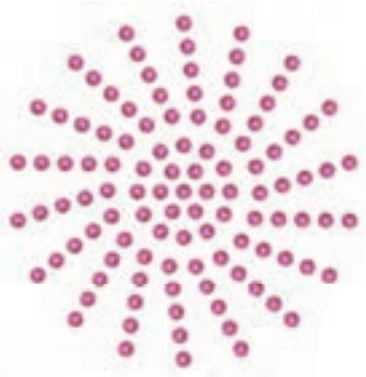
















### Animals





No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
CM140 88.1 x 97.7	 	CM142 56.5 x 66.7	 
FB258 83.2 x 184.0	 	FQ106 109.3 x 108.9	 
FQ617 118.0 x 198.3	 	FQ624 64.5 x 144.2	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
MT022 123.2 x 125.4	 	MT028 103.3 x 93.4	 
WM785 84.6 x 103.4	 	WP217 93.3 x 78.1	 
WP244 136.8 x 172.4	 	WS610 127.3 x 111.1	 

**DesignWorks design**

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
DW11  70 x 71		BE790901  181 x 252	
BE790903  181 x 292		BE790905  104 x 227	
BE790906  192 x 195		BE790909  167 x 322	


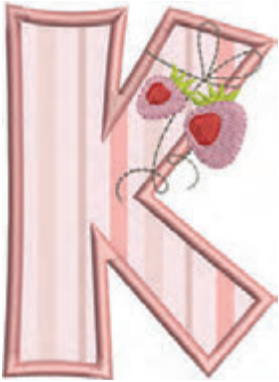

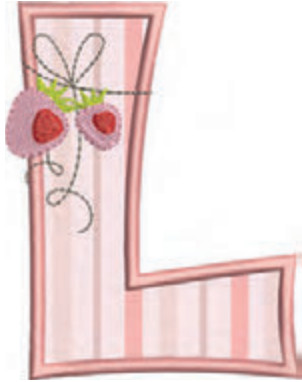

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
DW07  114 x 152		DW05  105 x 94	
DW10  184 x 184		DW08  100 x 206	
BE700121  196 x 197		BE700122  119 x 37	

No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
BE700123  112 x 205		BE700124  141 x 134	

### Monograms in pink













No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
BE790101  75.0 x 89.4	 	BE790102  73.0 x 89.4	 
BE790103  64.7 x 92.8	 	BE790104  90.4 x 97.5	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790105  60.9 x 89.6	 	BE790106  63.5 x 89.9	 
BE790107  79.6 x 89.9	 	BE790108  70.5 x 90.0	 
BE790109  32.2 x 100.6	 	BE790110  73.5 x 89.4	 








No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790111  65.0 x 89.4	 	BE790112  70.1 x 89.7	 
BE790113  88.8 x 90.1	 	BE790114  76.4 x 90.6	 
BE790115  74.4 x 89.3	 	BE790116  71.1 x 102.9	 



















No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790117  82.1 x 100.8	 	BE790118  73.6 x 103.8	 
BE790119  60.6 x 89.5	 	BE790120  71.8 x 99.6	 
BE790121  77.4 x 89.7	 	BE790122  86.9 x 89.3	 







































No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790123  104.6 x 89.4	 	BE790124  90.6 x 92.2	 
BE790125  84.1 x 89.4	 	BE790126  56.5 x 88.9	 

### Monograms in blue

No.	Embroidery motif	No.	Embroidery motif
Width x Height in mm	Colors	Width x Height in mm	Colors
BE790201 ☐ 84.9 x 95.3	 	BE790202 ☐ 79.7 x 95.1	 
BE790203 ☐ 78.7 x 95.3	 	BE790204 ☐ 104.4 x 96.5	 
BE790205 ☐ 83.7 x 95.2	 	BE790206 ☐ 77.7 x 96.0	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790207  92.8 x 95.3	 	BE790208  87.7 x 95.3	 
BE790209  51.3 x 111.0	 	BE790210  88.7 x 95.6	 
BE790211  75.5 x 95.3	 	BE790212  83.3 x 95.3	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790213  99.7 x 101.3	 	BE790214  89.9 x 94.8	 
BE790215  87.9 x 95.3	 	BE790216  71.6 x 94.9	 
BE790217  86.3 x 102.2	 	BE790218  82.6 x 95.1	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790219  79.2 x 95.3	 	BE790220  69.1 x 95.3	 
BE790221  89.9 x 95.6	 	BE790222  92.9 x 95.7	 
BE790223  114.7 x 95.2	 	BE790224  93.1 x 95.2	 

No. Width x Height in mm	Embroidery motif Colors	No. Width x Height in mm	Embroidery motif Colors
BE790225  89.1 x 95.3	 	BE790226  59.3 x 95.9	 

## Index

### A

Activating the audio signals	59
Activating the bobbin thread indicator	59
Activating the upper thread indicator	59
Adjusting the brightness of the display	60
Adjusting the sewing light	60
Altering the embroidery motif size disproportionately	71
Altering the embroidery motif size proportionally	71
Altering the stitch density	73
Attaching the hoop	51
Attaching the stitch plate	38

### B

Back to default settings	61
--------------------------	----

### C

Calibrating the display	61
Calibrating the hoop	55
Calling up Help	67
Calling up the Embroidery Consultant	67
Calling up the tutorial	67
Checking the firmware version	65
Child safety feature	67
Cleaning the hook	97
Cleaning the thread catcher	63
Combi Mode	81
Combining embroidery motifs	81
Connecting the embroidery module	46
Connecting the foot control	31

### D

Dispose of the machine	107
------------------------	-----

### E

Embroidery file format	28
Embroidery test	28
Environmental Protection	12
Error messages	103

### F

Free point positioning	80
------------------------	----

### I

Inserting the embroidery needle	37
Introduction	13

### K

Key to signs	14
--------------	----

### L

Lubricating the hook	98
Lubricating the machine	64

### M

Maintenance and cleaning	97
--------------------------	----

### N

Needle, Thread, Fabric	25
Needles, Threads	26

### O

Overview Embroidery module	22
Overview Embroidery motifs	108

### P

Placing the spool disc	35
Positioning of grid points	79
Power save mode	67

### R

Raising/Lowering the needle	33
Registering details of the dealer	66
Regulating the speed	68
Removing thread remnants under the stitch plate	97

### S

Safety instructions	10
Saving Service data	66
Selecting a language	60
Selecting an embroidery motif	47
Selecting personal settings	58
Storing the machine	107

**T**

---

Technical data	107
Threading the bobbin thread	44
Threading the upper thread	39
Troubleshooting	100

**U**

---

Updating the machine Firmware	62
Using a spool net	35
Using eco mode	67

**V**

---

Virtual positioning of the embroidery hoop	53
--	----





in partnership with

*Mettler*<sup>®</sup>

made to create **BERNINA**